

EXO Fixed HD Camera System

High Definition Camera Systems for Harsh Environments

EXVF5C-1.....720P, 12x optical zoom, Vandal resistant with wall / pole mount
EXPF5C-1.....720P, 12x optical zoom, Pressurized with wall / pole mount
EXVF5C-2.....1080P, 10x optical zoom, Vandal resistant with wall / pole mount
EXPF5C-2.....1080P, 10x optical zoom, Pressurized with wall / pole mount



Moog Inc.
Sensor and Surveillance Systems

3650 Woodhead Drive Northbrook, IL, USA 60062
+1.847.498.0700 Fax: +1.847.498.1258 www.moogS3.com:

IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with damp cloth.
- 7 Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- 8 Cable Runs- All cable runs must be within permissible distance.
- 9 Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

- a. This installation should be made by a qualified service person and should conform to all local codes.
 - b. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.
- 10 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 11 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 12 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 13 Only use attachment/ accessories specified by the manufacturer.
 - 14 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
 - 15 Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 16 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:


- 1 **The shipping carton and packaging material.**
They are the safest material in which to make future shipments of the equipment.
- 2 **These Installation and Operating Instructions.**

SERVICE

If technical support or service is needed, contact us at the following number:

TECHNICAL SUPPORT
AVAILABLE 24 HOURS
1 - 800 - 554 - 1124

SAFETY PRECAUTIONS

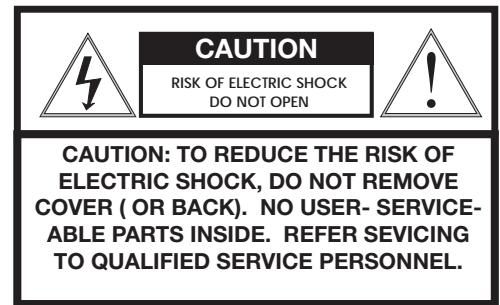

The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk to persons.

Este símbolo se piensa para alertar al usuario a la presencia del "voltaje peligroso no-aislado" dentro del recinto de los productos que puede ser un riesgo de choque eléctrico.

Ce symbole est prévu pour alerter l'utilisateur à la présence "de la tension dangereuse" non-isolée dans la clôture de produits qui peut être un risque de choc électrique.

Dieses Symbol soll den Benutzer zum Vorhandensein der nicht-Isolier "Gefährdungsspannung" innerhalb der Produkteinschließung alarmieren die eine Gefahr des elektrischen Schlages sein kann.

Este símbolo é pretendido alertar o usuário à presença "di tensão perigosa non-isolada" dentro do cerco dos produtos que pode ser um risco de choque elétrico.

Questo simbolo è inteso per avvertire l'utente alla presenza "di tensione pericolosa" non-isolata all'interno della recinzione dei prodotti che può essere un rischio di scossa elettrica.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Este símbolo del punto del exclamation se piensa para alertar al usuario a la presencia de instrucciones importantes en la literatura que acompaña la aplicación.

Ce symbole de point d'exclamation est prévu pour alerter l'utilisateur à la présence des instructions importantes dans la littérature accompagnant l'appareil.

Dieses Ausruf Punktsymbol soll den Benutzer zum Vorhandensein de wichtigen Anweisungen in der Literatur alarmieren, die das Gerät begleitet.

Este símbolo do ponto do exclamation é pretendido alertar o usuário à presença de instruções importantes na literatura que acompanha o dispositivo.

Questo simbolo del punto del exclamation è inteso per avvertire l'utente alla presenza delle istruzioni importanti nella letteratura che accompagna l'apparecchio.

Product Warranty Registration

Register Your Products Online

www.moogS3.com/technical-support/product-registration

Moog values your patronage. We are solely committed to providing you with the highest quality products and superior customer service. With 3-Year and 5-Year warranties (depending on the product purchased) we stand behind every product we sell.

See full warranty details at www.moogS3.com/technical-support/warranty-plan/

Register your products today to receive the following benefits:

- Simple and Trouble-Free RMA process
- Product / software updates
- Special promotions
- Eliminate the need to archive purchase documents such as receipts, purchase orders, etc.

Limited Warranty for Moog Products

Moog - Decatur Operations, subsequently referred to as "Manufacturer," warrants these products to be free from defects in material or workmanship as follows:

PRODUCT CATEGORY	PARTS \ LABOR
All Enclosures and Electronics	Five (5) Years
Accessory Brackets	Five (5) Years
Controllers	Three (3) Years
Power Supplies / IR Illuminators	Three (3) Years
Poles / PolEvators™ / CamEvator	Three (3) Years
Warrior Series™ / Q-View™	Three (3) Years
SView Series™	Three (3) Years 6 months if used in auto scan / tour operation
DeputyDome™, NiteTrac™, Igloo Dome, PurgeDome™	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ Dome and Fixed Camera Systems*	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ GeminEye Visible and Thermal Camera Systems	One (1) Year

During the labor warranty period, to repair the Product, Purchaser will either return the defective product, freight prepaid, or deliver it to Manufacturer at Moog Decatur Operations, 2525 Park Central Boulevard, Decatur, Georgia, 30035. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA # (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at 800.554.1124, extension 101. Manufacturer will return the repaired product freight prepaid to Purchaser. Manufacturer is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges. The limited warranty stated in these product instructions is subject to all of the following terms and conditions.

TERMS AND CONDITIONS

1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE: If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Manufacturer. All claims for warranty service must be made within the warranty period. If after investigation, Manufacturer determines the reported problem was not covered by the warranty, Purchaser shall pay Manufacturer for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period of the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater.

2. EXCLUSIVE REMEDY: ACCEPTANCE: Purchaser's exclusive remedy and Manufacturer's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts.

3. EXCEPTIONS TO LIMITED WARRANTY: Manufacturer shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use, negligence, accident, or acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Manufacturer shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Manufacturer excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Manufacturer to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product. ANY COST ASSOCIATED WITH REMOVAL OF DEFECTIVE PRODUCT AND INSTALLATION OF REPLACEMENT PRODUCT IS NOT INCLUDED IN THIS WARRANTY.

4. PROOF OF PURCHASE: The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, MANUFACTURER HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. MANUFACTURER HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-MANUFACTURER PRODUCTS OR NON-MANUFACTURER RECOMMENDED PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

LIMITATION OF LIABILITY

THE LIABILITY OF Manufacturer, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL MANUFACTURER BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REPLACEMENT LABOR COSTS, REIMBURSEMENT, OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.



Electrical Specifications

EXO Fixed



English

Power Input:
- 24VAC model 30W max. (with heater)
- PoE IEEE 802.3-AT
- 12VDC model 18W max. (with heater)

The Fixed EXO HD Camera System is designed to accept (3) different power inputs. They are:

- 1). PoE - (Factory Ready - EX*F5C-1 models)
- 2). 24 Volt AC - (Factory Ready - EX*F5C-1 models)
- 3). 12 Volt DC - (Factory Ready - EX*F5C12-1 models)

PoE Midspan Sold Separately:

MS30WA

30 W midspan, 802.3at compliant, 100-240Vac Input, 3 prong power plug.



Español

Entrada de energia:
- 24VAC modelos 30W max. (con calefacción)
- PoE IEEE 802.3-AT
- 12VDC modelos 18W max. (con calentador)

El fijo EXO sistema de cámaras HD está diseñada para recibir (3) entradas de energía diferentes. Ellos son:

- 1). PoE - (Factory Ready - EX * 1 F5C los modelos)
- 2). 24 voltios de CA - (Factory Ready - EX * 1 F5C los modelos)
- 3). 12 Volt DC - (Factory Ready - EX-1 * F5C12 modelos)

PoE Midspan se vende por separado:

MS30WA

30 W midspan, 802.3af compatible, 100-240V de entrada, 3 enchufe clavijas.



Français

Entrada de energia:
- 24VAC modèles 30W max. (con calefacción)
- PoE IEEE 802.3-AT
- 12VDC modèles 18W max. (con calentador)

Le système de caméra HD EXO fixe est conçu pour accepter (3) différentes entrées d'alimentation. Ils sont les suivants:

- 1). PoE - (usine Ready - EX * Les modèles F5C-1)
- 2). 24 Volt AC - (usine Ready - EX * Les modèles F5C-1)
- 3). 12 Volt DC - (usine Ready - EX * F5C12-1 modèles)

Injecteur PoE vendu séparément:

MS30WA

30 W mi-portée, 802.3at conforme, 100-240VAC Input, 3 broches prise d'alimentation.



Deutsch

Entrada de energia:
- 24VAC Modelle 30W max. (con calefacción)
- PoE IEEE 802.3-AT
- 12VDC Modelle 18W max. (con calentador)

Die Feste EXO HD Camera System wurde entwickelt, um (3) unterschiedlichen Eingangsleistungen zu akzeptieren. Es sind dies:

- 1). PoE - (Fabrik Ready - EX * F5C-1-Modelle)
- 2). 24 Volt AC - (Fabrik Ready - EX * F5C-1-Modelle)
- 3). 12 Volt DC - (Fabrik Ready - EX * F5C12-1-Modelle)

PoE Midspan Separat erhältlich:

MS30WA

30 W midspan, 802.3at-konform, 100-240VAC Eingang, 3 Zinken Netzstecker.



Portuguese

Entrada de energia:
- 24VAC modelos 30W max. (con calefacción)
- PoE IEEE 802.3-AT
- 12VDC modelos 18W max. (con calentador)

O EXO Sistema de Câmera HD fixo é projetado para aceitar (3) entradas de energia diferentes. Eles são:

- 1). PoE - (Fábrica de Pronto - EX * F5C-1 modelos)
- 2). 24 Volt AC - (Fábrica de Pronto - EX * F5C-1 modelos)
- 3). 12 Volts DC - (Fábrica de Pronto - EX * F5C12-1 modelos)

PoE Midspan vendido separadamente:

MS30WA

30 W midspan, 802.3at compatível, 100-240V de entrada, 3 plugue pinos.



Italiano

Entrada de energia:
- 24VAC modelli 30W max. (con calefacción)
- PoE IEEE 802.3-AT
- 12VDC modelli 18W max. (con calentador)

Il sistema di telecamere fisse EXO HD è progettato per accettare (3) ingressi di potenza differenti. Essi sono:


- 1). PoE - (Fabbrica Pronti - EX * F5C-1 modelli)
- 2). 24 Volt AC - (Fabbrica Pronti - EX * F5C-1 modelli)
- 3). 12 Volt DC - (Fabbrica Pronti - EX * F5C12-1 modelli)

Midspan PoE venduti separatamente:


MS30WA

30 W midspan, 802.3at compliant, 100-240Vac Input, 3 spina tripolare.


Contents of Box

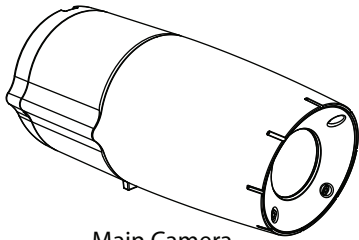


Main Camera

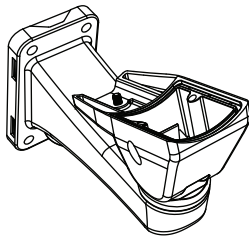

Wall Mount
(mount varies based on application)

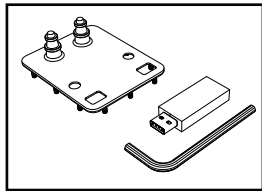


Hardware Packet:
Mount Gasket
Screws

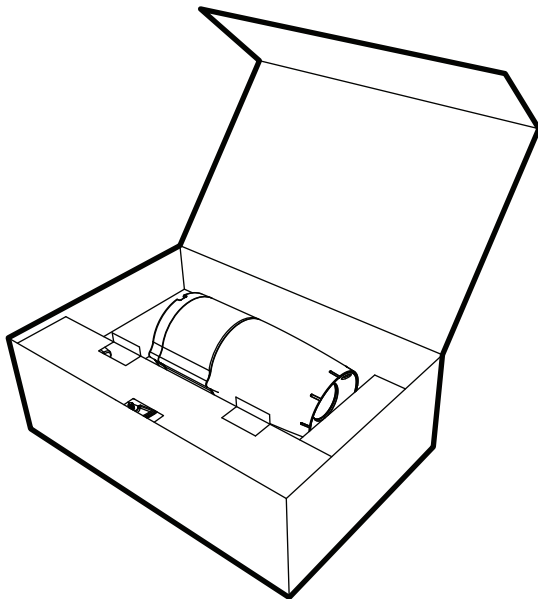

Proper Assembly of Mounting Bracket

EXO Fixed

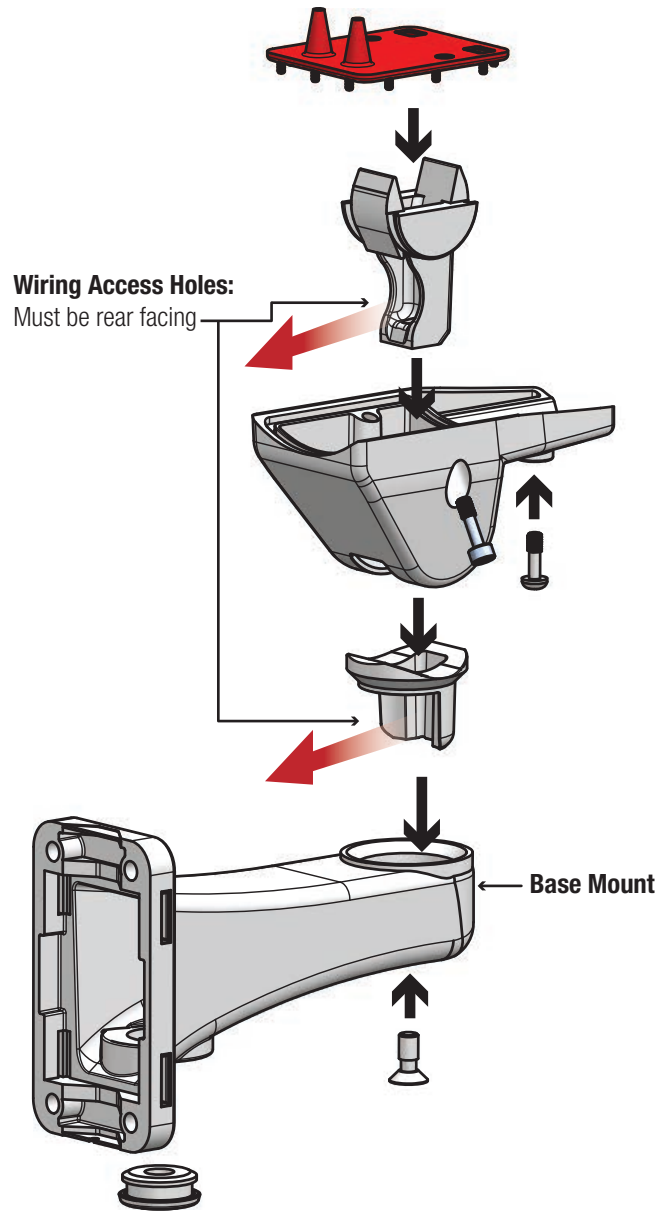


CAUTION: When assembling the mounting bracket, make sure all the wiring access holes are facing towards the rear of the base mount.

- PRECAUCIÓN: Al montar la consola de montaje, cerciórese de que todos los agujeros de acceso del cableado son revestimiento hacia la parte posterior del portal bajo del acceso de los montaje.
- ATTENTION : En assemblant le support, assurez-vous que toutes les ouvertures d'accès de câblage sont revêtement vers l'arrière du portail bas d'accès de bâtis.
- VORSICHT: Wenn Sie die Schienenplatte zusammenbauen, stellen Sie sicher, dass alle Verdrahtungszugangslöcher Einfassung in Richtung zur Rückseite des niedrigen Einfassungszugangsportals sind.
- CUIDADO: Ao montar o suporte, certifique-se que todos os furos de acesso da fiação são revestimento para a parte traseira do portal baixo do acesso das montagens.
- ATTENZIONE: Nel montare il montaggio - la staffa, si assicura che tutti i fori di accesso dei collegamenti siano rivestimento verso la parte posteriore del portale basso di accesso dei supporti.

Suggested Hardware for the Mounting Holes: (4) 5/16" - 18 (or M8 for metric) x minimum 1 1/4" Hex Head Bolt

- (4) 5/16" Flat Washer
- (4) 5/16" Lock Washer


1

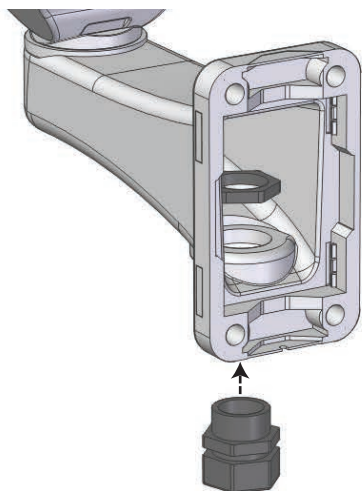

If running wire through a conduit to the housing mount, first install appropriate fittings to the mount base.

- Si se ejecuta a través de un cable de conducto a la carcasa de montaje, primero instale los accesorios adecuados para la base de montaje.
- Si vous utilisez le câble dans un conduit à la monture logement, installez d'abord raccords appropriés à la base de monture.
- Wenn Laufen Draht über eine Leitung mit dem Gehäuse montieren, installieren Sie zuerst geeignete Armaturen an der Halterung Basis.
- Se você estiver executando fio através de um canal para a montagem de habitação, primeiro instale acessórios apropriados à base de montagem.
- Se l'esecuzione del filo attraverso un condotto al monte degli alloggi, prima installare raccordi appropriati per la base di montaggio.

2

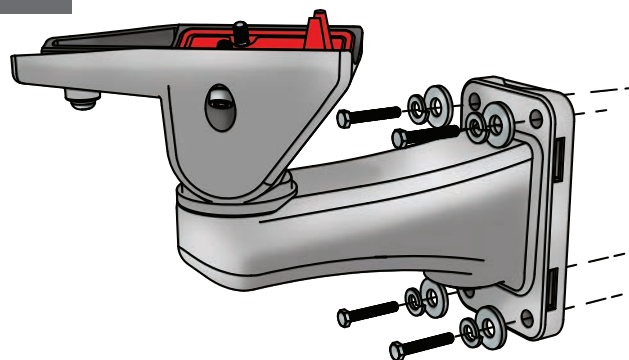


Attach mount to wall with suitable hardware (not provided).

- Ate el montaje a la pared con el hardware conveniente (no proporcionado).
- Attachez le bâti au mur avec le matériel approprié (non fourni).
- Bringen Sie Einfassung zur Wand mit der verwendbaren Hardware an (nicht bereitgestellt).
- Una a montagem à parede com a ferragem apropriada (não fornecida).
- Attacchi il supporto alla parete con fissaggi adatti (non forniti).

POLE MOUNTING


3

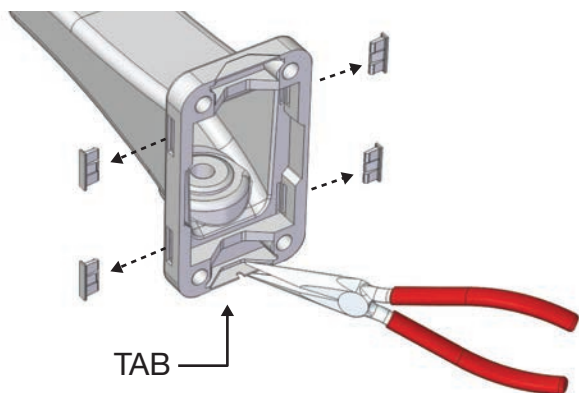

If attaching to pole, first break away tabs with pliers and remove (4) strap plugs.

- Si atan al poste, el primeros rompen lejos lengüetas con los alicates y quitan (4) los enchufes de la correa.
- Si attachant au poteau, les premiers cassent loin des étiquettes avec des pinces et enlèvent (4) des prises de courroie.
- Bei der Befestigung zum Pfosten, brechen erste weg Vorsprünge mit Zangen und entfernen (4) Bügelstecker.
- Se unindo ao pólo, o primeiros quebram afastado abas com alicates e removem (4) plugues da cinta.
- Se attaccando al palo, i primi rompono via le linguette con le pinze e rimuovono (4) la cinghia tappa.

4

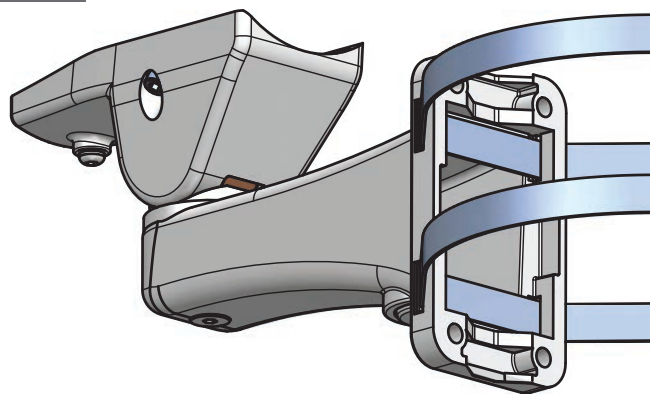


Thread straps (not provided) through the mount as shown.

- Pase las correas (no incluidos) a través del soporte como se muestra.
- Sangles de la discussion (non fournies) dans le support comme indiqué.
- Themen-Riemen (nicht mitgeliefert) durch die Halterung wie gezeigt.
- Correas do Tópico (não fornecidos) através da montagem imediata.
- Cinghie di discussione (non in dotazione) attraverso il supporto come illustrato.

Pole or Wall Mount (Use Steel Straps to Mount to Pole)


5

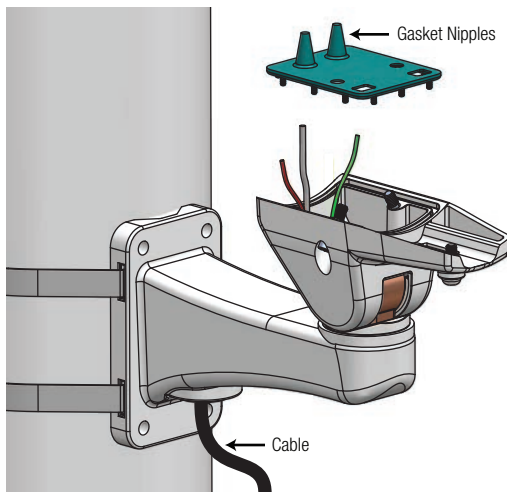

Pierce the gasket nipples (as needed). Place the gasket as shown. Pass wires without connectors thru gasket and nipples.

- Alimente el cable a través del soporte, perforo las entrerrosas de la junta (según lo necesitado). Coloque la junta como se muestra.
- Alimentez le câble par la parenthèse, percez les mamelons de garniture (comme nécessaire). Placez la garniture comme montrée.
- Ziehen Sie Kabel durch Haltewinkel ein, durchbohren Sie die Dichtungsnippel (wie gebraucht). Setzen Sie die Dichtung wie gezeigt.
- Alimente o cabo através do suporte, perfure os bocais da gaxeta (como necessário). Coloque a gaxeta como mostrada.
- Alimenti il cavo tramite la staffa, perfori gli ugelli della guarnizione (come stato necessario). Disponga la guarnizione come indicata.


6

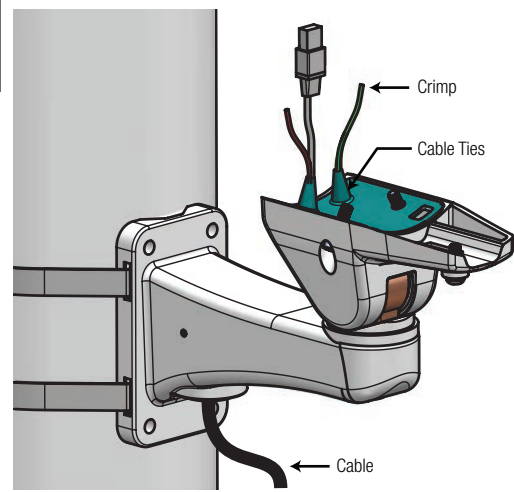

Crimp the connectors as needed. Then use cable ties on the nipples to secure, leave an extra 2" of cable.

- Crimp los conectores según sea necesario. A continuación, utilice bridas para cables en los pezones para asegurar, deje un 2 extra "del cable.
- Sertir les connecteurs si nécessaire. Ensuite, utiliser des attaches câbles sur les mamelons pour sécuriser, laisser un 2 supplémentaire "de câble.
- Crimp die Anschlüsse je nach Bedarf. Dann nutzen Sie Kabelbindern an den Brustwarzen zu sichern, lassen einen zusätzlichen 2 "Kabel.
- Cravar os conectores conforme necessário. Em seguida, use abraçadeiras nos mamilos para garantir, deixe um 2 extra "de cabo.
- Crimpare i connettori se necessario. Quindi utilizzare fascette sui capezzoli per fissare, lasciare un 2 in più "di cavo.


7

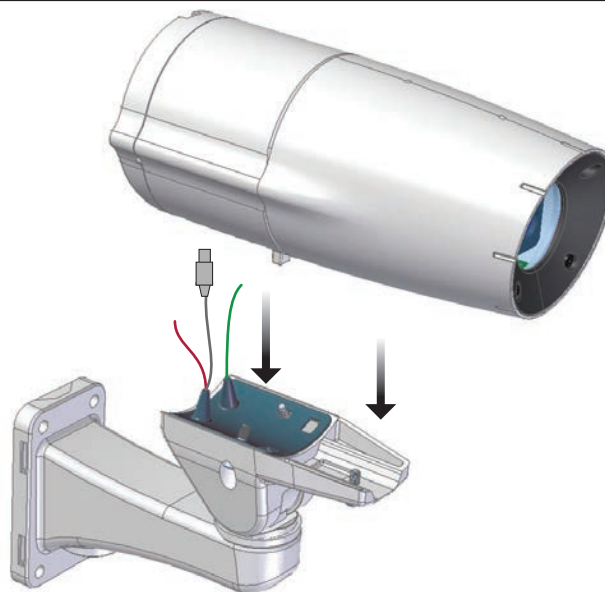

Place the camera on the bracket, carefully feed the wires and connectors through the housing and into the rear cavity. Use the provided captive screws and the 5mm Allen key (included) to mount.

- Coloca la carcasa en el soporte, se alimentan cuidadosamente los cables y conectores a través del alojamiento y dentro de la cavidad trasera. Use los tornillos suministrados y la llave Allen de 5 mm (incluido) para montar.
- Placer le boîtier sur le support, nourrir soigneusement les câbles et les connecteurs à travers le boîtier et dans la cavité arrière. Utilisez les vis imperdables fournies et la clé Allen de 5mm (inclus) pour monter.
- Legen Sie das Gehäuse auf der Konsole, es vorsichtig die Kabel und Stecker durch das Gehäuse und in den hinteren Hohlraum. Verwenden Sie die mitgelieferten unverlierbaren Schrauben und die 5mm Inbusschlüssel (im Lieferumfang) zu montieren.
- Colocar a caixa do suporte, com cuidado alimentar os fios e ligações através do invólucro e para dentro da cavidade traseira. Use os parafusos fornecidos ea chave Allen de 5 mm (incluído) para montar.
- Posizionare la custodia sulla staffa, fare avanzare i cavi e connettori attraverso l'alloggiamento e nella cavità posteriore. Utilizzare le viti fornite e la chiave Allen da 5 mm (in dotazione) per montare.

FACING REAR OF CAMERA

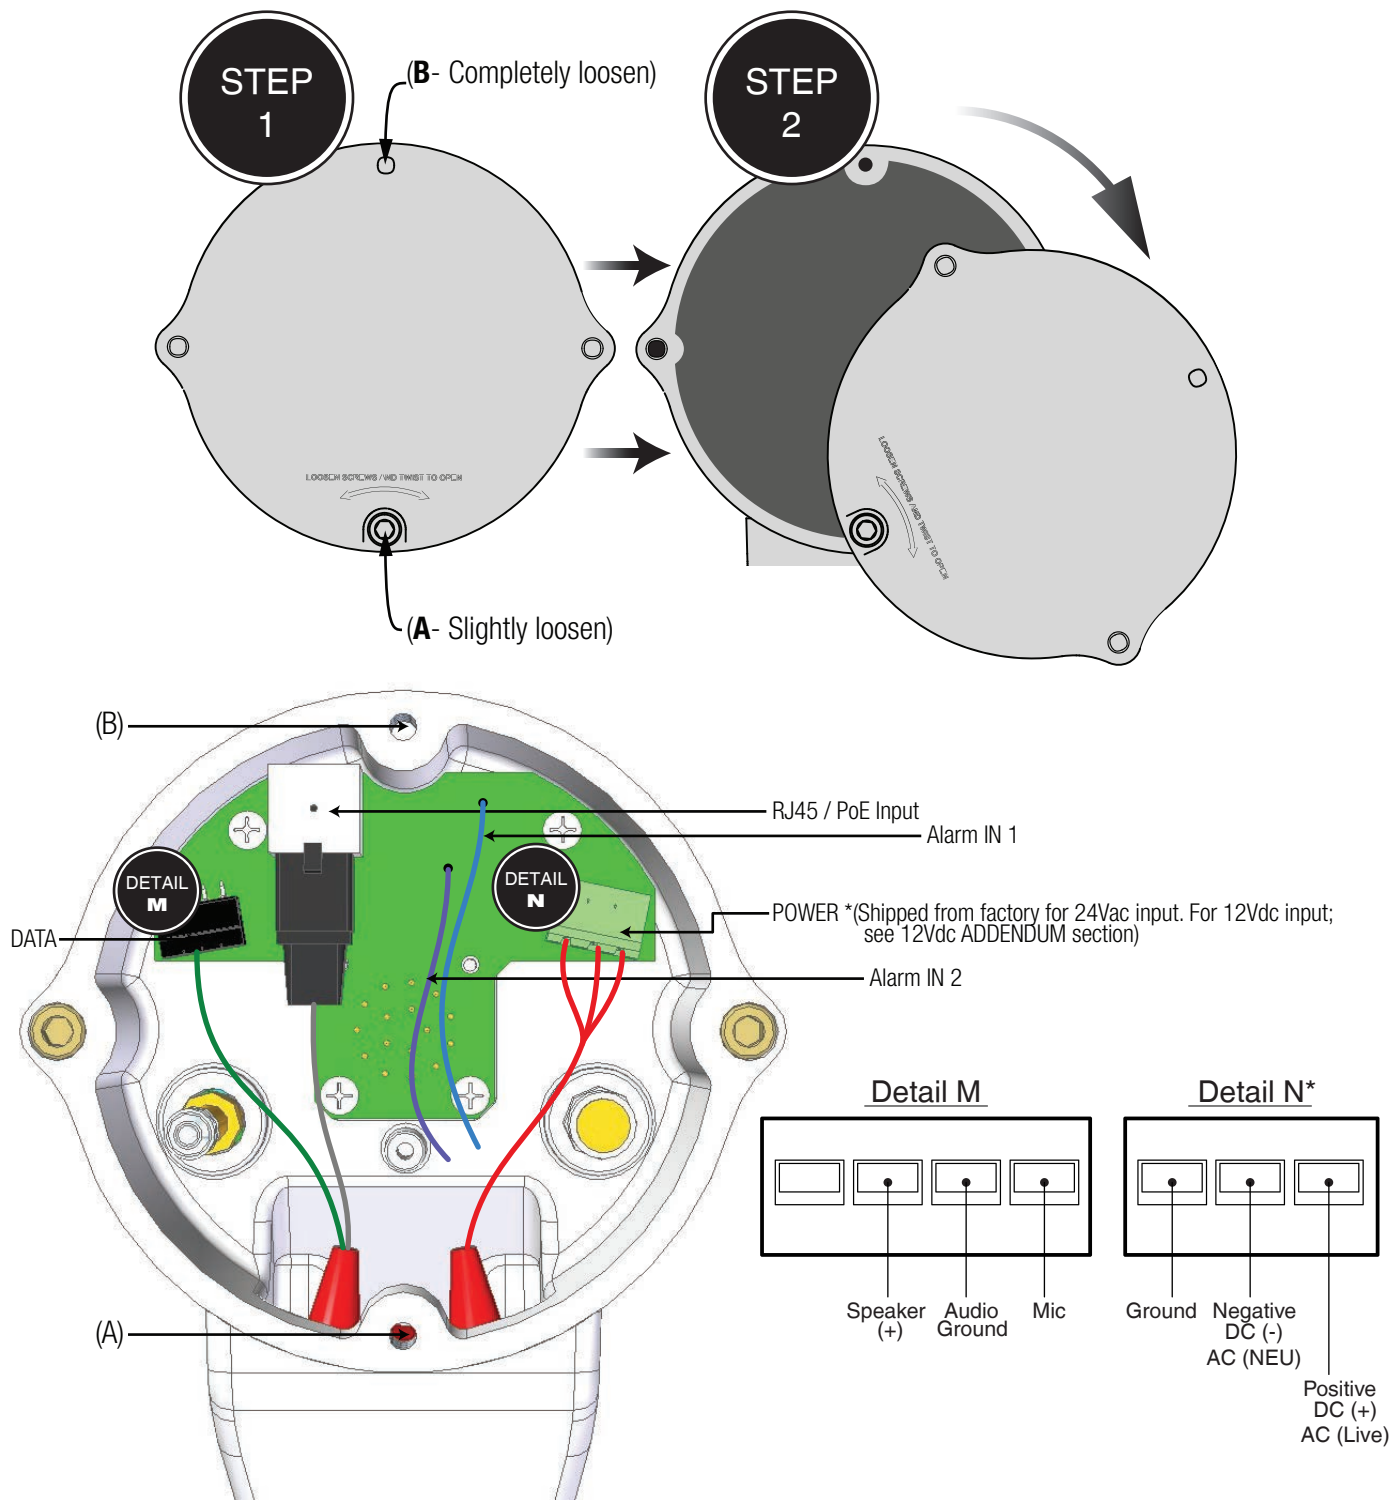

Make all final connections in the rear cavity. To do so, rotate the rear cover by slightly loosening the screw marked (A) and completely loosening the screw marked (B). Then make all of the necessary wiring connections.

- Para girar la cubierta posterior, afloje levemente el (a) marcado tornillo y afloje totalmente el (b) marcado tornillo. Entonces haga todas las conexiones necesarias del cableado.
- Afin de tourner la couverture arrière, détachez légèrement le (a) marqué par vis et détachez complètement le (b) marqué par vis. Établissez alors tous les rapports nécessaires de câblage.
- Um die hintere Abdeckung zu drehen, lösen Sie etwas das Schraube signifikante (a) und lösen Sie vollständig das Schraube signifikante (b). Stellen Sie dann alle notwendigen Verdrahtungsbeziehungen her.
- A fim girar a tampa traseira, afrouxe ligeiramente o (a) marcado parafuso e afrouxe completamente o (b) marcado parafuso. Faça então todas as conexões necessárias da fiação.
- Per girare la copertura posteriore, allenti un po' la vite contrassegnata (A) e completamente allenti la vite contrassegnata (B). Allora faccia tutti collegamenti necessari del collegamento.


9A





To Access the Micro SD Card Slot:

FIRST: MAKE SURE UNIT IS POWERED OFF COMPLETELY

USE FORCE TO SPERATE

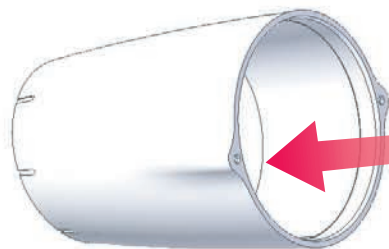

DETAIL A
FACING REAR OF ENCLOSURE

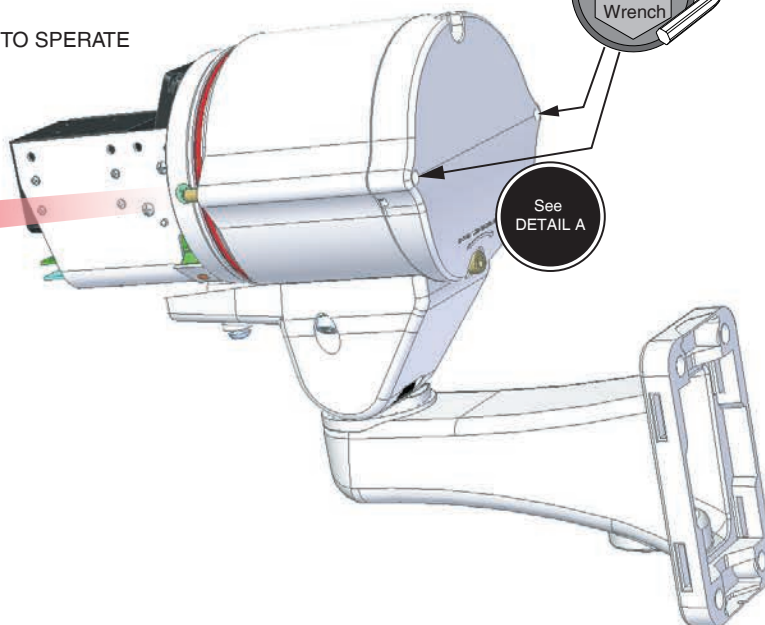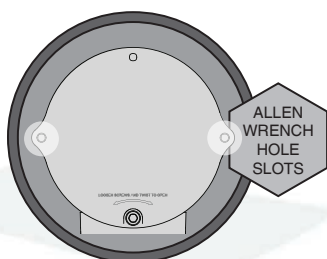

Thoroughly loosen the (2) captive screws (shown in DETAIL A) with provided 5mm Allen Key (included) to remove the front part of the camera system.


- Completamente afloje los dos (2) tornillos (que se muestra en detalle A) con la llave Allen de 5 mm suministrado (incluido) para quitar la parte frontal del sistema de cámaras.
- Complètement desserrer l'(2) vis imperdables (représenté en détail A) avec fourni 5mm Clé Allen (inclus) pour retirer la partie avant du système de caméra.
- Gründlich lockern die (2) unverlierbaren Schrauben (im Detail gezeigt A) versehen mit 5mm Inbusschlüssel (im Lieferumfang enthalten), um den vorderen Teil des Kamera-System zu entfernen.
- Completamente soltar a (2) parafusos (mostrados em detalhe A) fornecido com cinco milímetros Chave Allen (incluído) para remover a parte da frente do sistema de câmara.
- Accuratamente allentare la (2) viti di fissaggio (mostrato in dettaglio A) fornito con 5 millimetri chiave a brugola (inclusa) per rimuovere la parte anteriore del sistema di telecamere.

B



To Access the Micro SD Card Slot:

FIRST: MAKE SURE UNIT IS POWERED OFF COMPLETELY

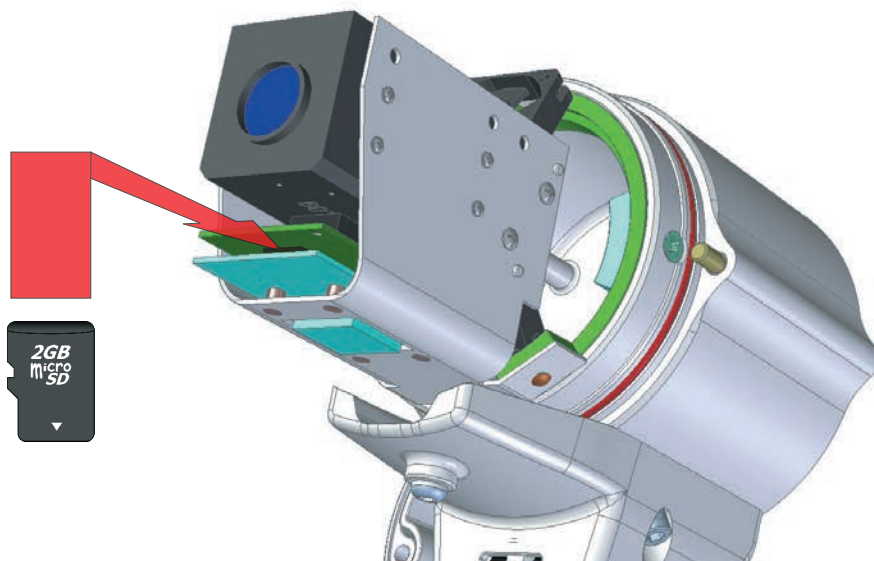

The micro SD card slot is found at the front of the camera, just under the camera on the lower board.


- Inserte la tarjeta SD.
- Insérez la carte SD.
- Legen Sie die SD-Karte.
- Insira o cartão SD.
- Inserire la scheda SD.

Recommended micro SD card sizes

MIN: 2GB

MAX: 32GB

* Recommended Class 10 rated card

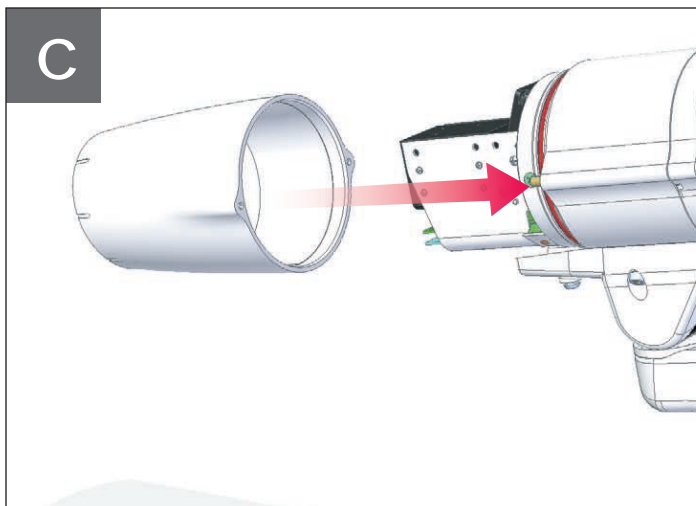


Reinstall front of enclosure and tighten the (2) screws from step 9A.

- Vuelva a instalar delante del gabinete y apriete los (2) tornillos del paso 9A.
- Réinstaller l'avant de l'enceinte et serrer les vis (2) de l'étape 9A.
- Installieren Sie vor der Gehäuse und ziehen Sie die (2) Schrauben aus Schritt 9A.
- Installieren Sie vor der Gehäuse und ziehen Sie die (2) Schrauben aus Schritt 9A.
- Reinstallare Frontale della custodia e stringere le (2) viti dal passo 9A.

Pressurize the Unit (NOT required for the Non-Pressurized Vandal Unit)

10

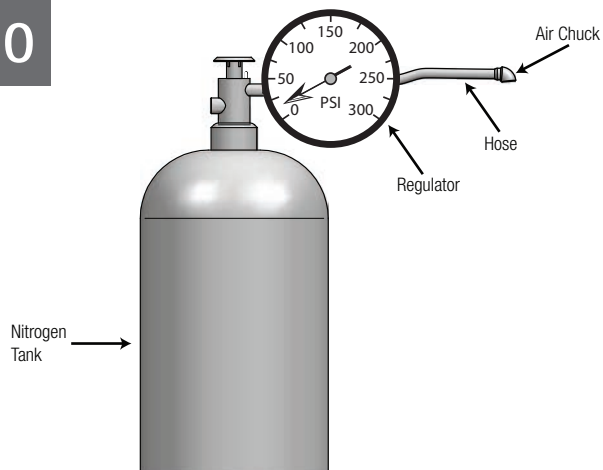


When pressurizing unit be sure to set the gauge or regulator slightly above the housing pressure target of 5-7psi (0.35-0.5bar).

- Al presurizar la unidad esté seguro de fijar el calibrador o el regulador levemente sobre la blanco de la presión de la cubierta de 5-7psi (0.35-0.5bar).
- En pressurant l'unité soyez sûr de placer la mesure ou le régulateur légèrement au-dessus de la cible de pression de logement de 5-7psi (0.35-0.5bar).
- Wenn Sie Maßeinheit unter Druck setzen, seien Sie sicher, die Lehre oder den Regler über das Gehäusedruckziel von 5-7psi (0.35-0.5bar) etwas einzustellen.
- Ao pressurizar a unidade seja certo ajustar ligeiramente o calibre ou o regulador acima do alvo da pressão da carcaça de 5-7psi (0.35-0.5bar).
- Nel pressurizzare l'unità sia sicuro regolare un po' il calibro o il regolatore sopra l'obiettivo di pressione dell'alloggiamento di 5-7psi (0.35-0.5bar).

Pressurize the Unit Cont.


11

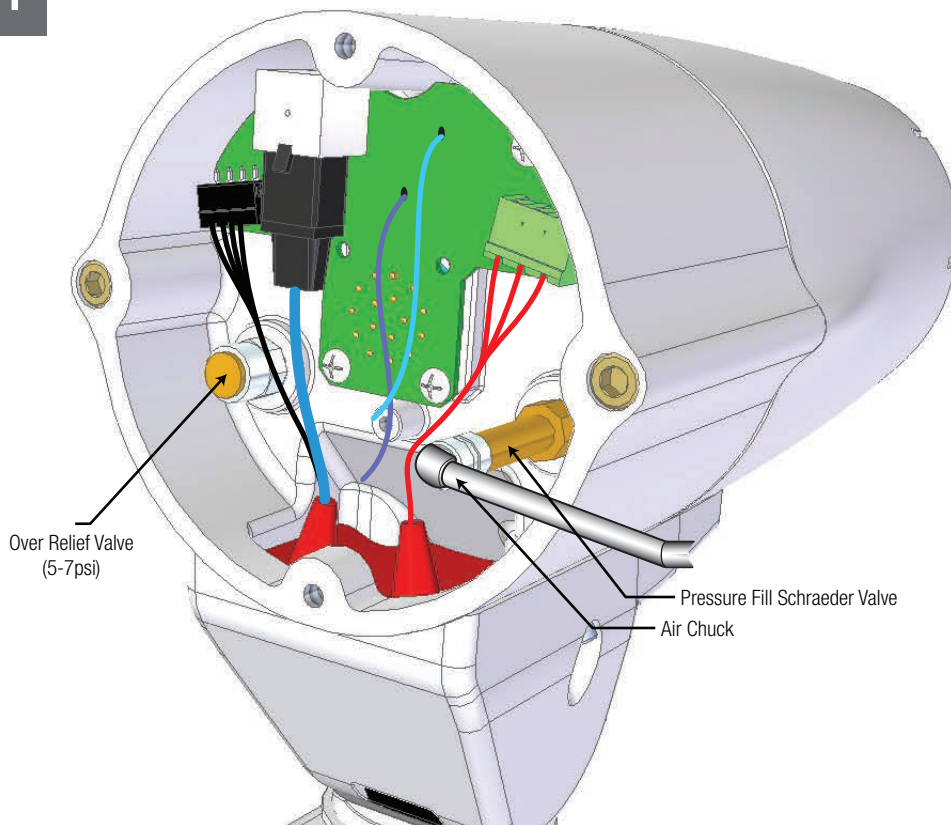

Place the air chuck on the fill valve and begin filling with inert gas such as nitrogen until pressure relief valve opens.

- Coloque la tirada del aire en la válvula del tanque y comience a llenar hasta que la válvula de descarga de presión se abra.
- Placez le mandrin d'air sur la valve de réservoir et commencez à remplir jusqu'à ce que la valve de décompression s'ouvre.
- Setzen Sie die Luftklemme auf das Behälterventil und fangen Sie an zu füllen, bis Druckablassventil sich öffnet.
- Coloque o mandril do ar na válvula do tanque e comece a encher-se até que a válvula de escape de pressão abra.
- Disponga il mandrino dell'aria sulla valvola del carro armato e cominci a riempire fino a che la valvola limitatrice della pressione non si apra.


12

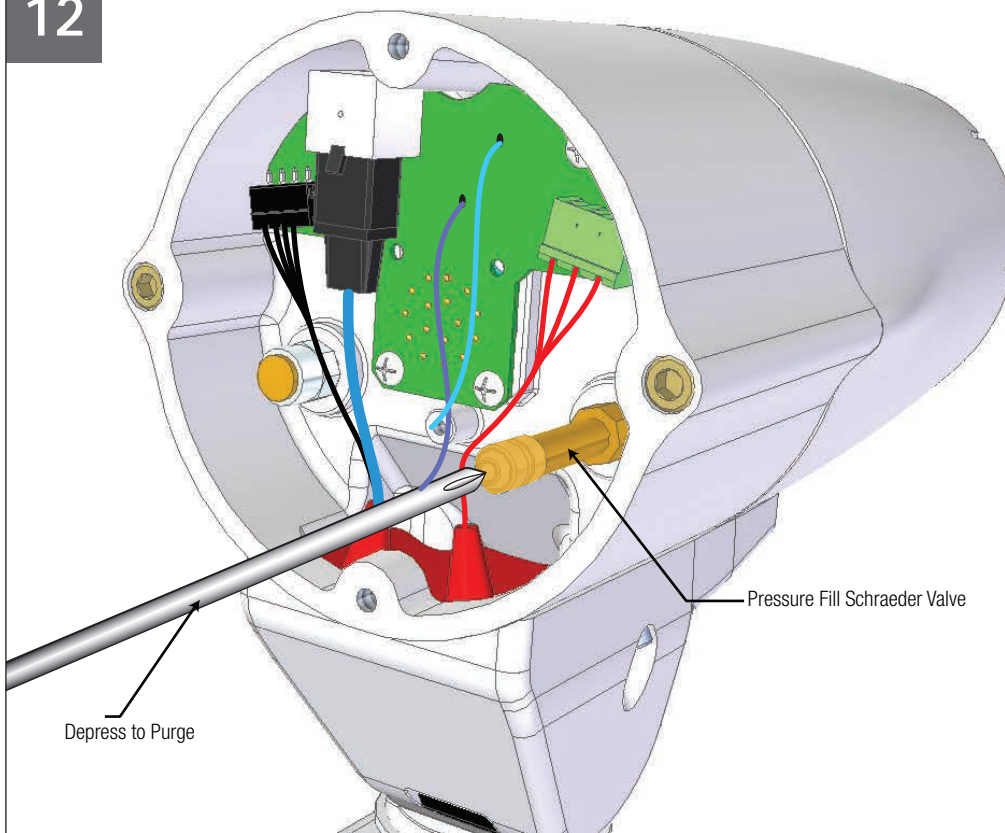

Depress the fill valve. Drain all air from the housing and repeat 3 times to remove all moisture.


- Presione la válvula del terraplén. Salga todo el aire de la cubierta y de la repetición 3 veces de quitar toda la humedad.
- Enfoncez la valve de suffisance. Évacuez tout l'air le logement et la répétition 3 fois d'enlever toute l'humidité.
- Drücken Sie das Füllevtil nieder. Lassen Sie alle Luft aus dem Gehäuse und der Wiederholung 3mal, alle Feuchtigkeit zu entfernen ab.
- Comprima a válvula da suficiência. Saia todo o ar da carcaça e da repetição 3 vezes remover toda a umidade.
- Deprima la valvola del materiale di riempimento. Tolga tutta l'aria dall'alloggiamento e dalla ripetizione 3 volte rimuovere tutta l'umidità.

13

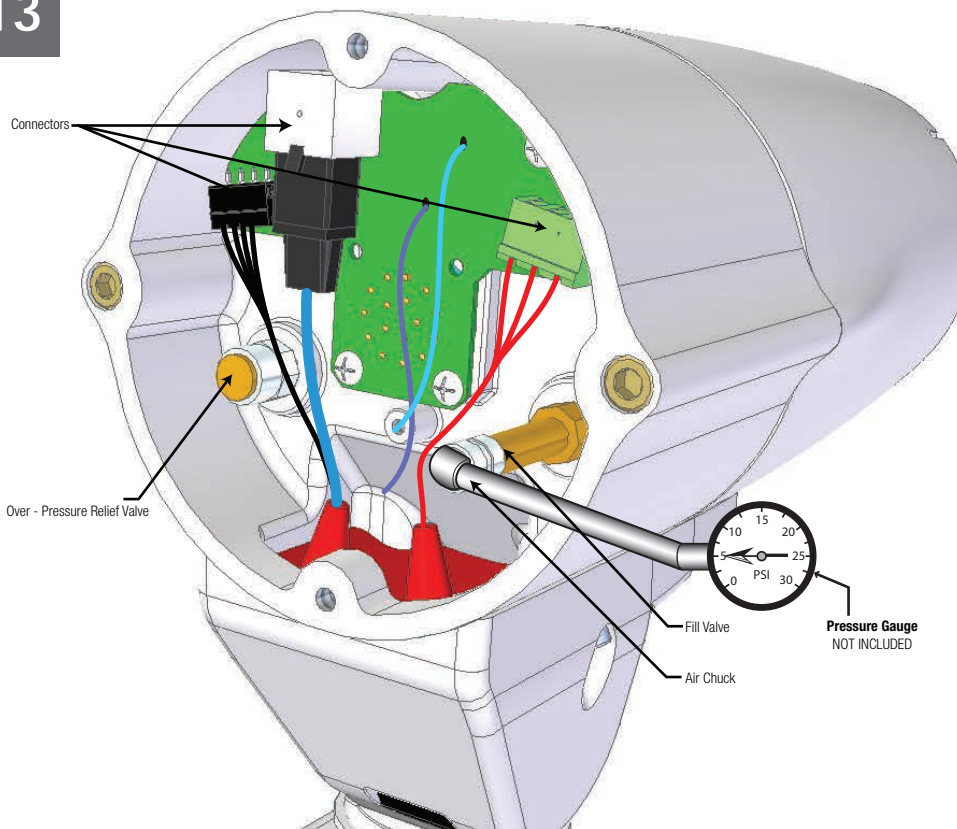

After purging and refilling, check the housings pressure. It should be around 5-7psi (0.35-0.5bar).

- Después de purgar y de rellenar, compruebe la presión de las cubiertas. Debe estar alrededor de 5-7psi (0.35-0.5bar).
- Après la purge et le remplissage, vérifiez la pression de logements. Elle devrait être autour de 5-7psi (0.35-0.5bar).
- Nachdem Sie bereinigt haben und wieder gefüllt haben überprüfen Sie den Gehäusedruck. Er sollte um 5-7psi (0.35-0.5bar) sein.
- Após a remoção e o reenchimento, verifíc a pressão das carcaças. Deve ser em torno de 5-7psi (0.35-0.5bar).
- Dopo l'eliminazione dell'inceppo ed il riempimento, controlli la pressione degli alloggiamenti. Dovrebbe essere intorno a 5-7psi (0.35-0.5bar).

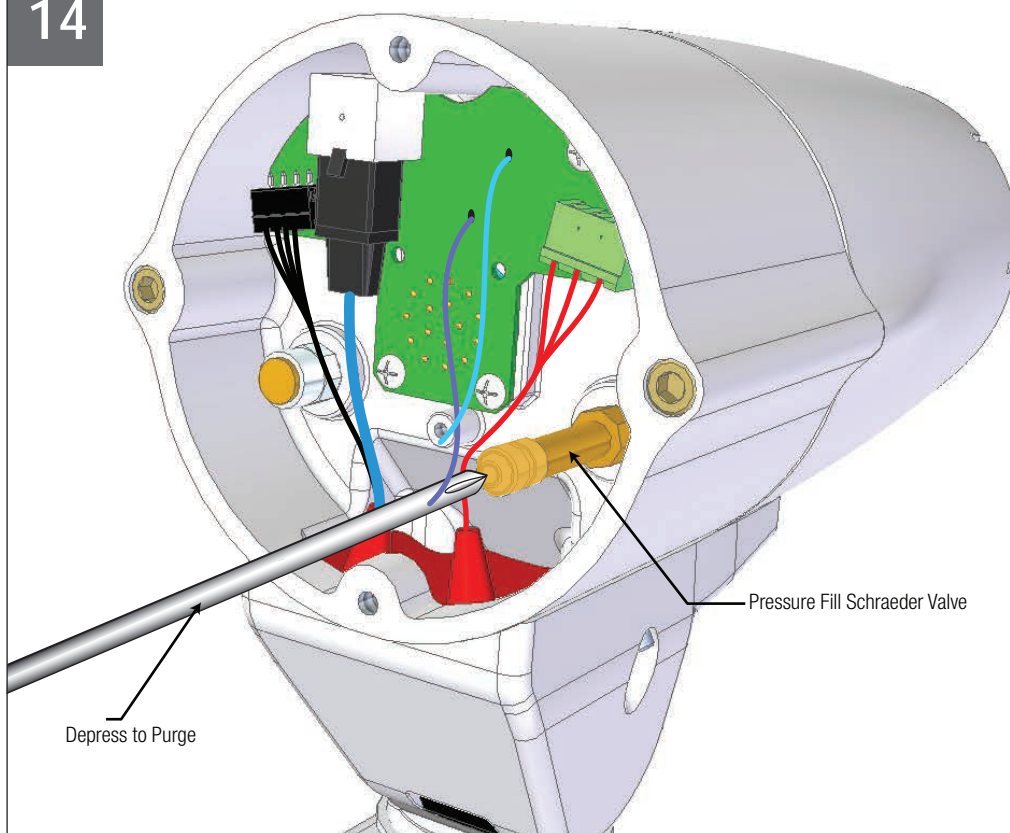


If the pressure in housing is more than 5-7psi, drain the valve until you reach the specified level of 5-7psi.

- Si la presión en la vivienda es más que el 5-7 psi, la válvula de desagüe hasta que llegue al nivel especificado de 5-7 psi.
- Si la pression dans le logement est plus que 5-7 psi, vidanger le robinet jusqu'à ce que vous atteignez le niveau spécifié de 5-7 psi.
- Wenn der Druck im Gehäuse ist mehr als 5-7psi, lassen Sie das Ventil, bis Sie die angegebene Höhe der 5-7psi erreichen.
- Se a pressão na carcaça é mais do que 5-7psi, escorra a válvula até chegar ao nível especificado de 5-7psi.
- Se la pressione nel contenitore è superiore a 5-7psi, la valvola di scarico fino a raggiungere il livello specificato di 5-7psi.

Replacement Parts List

EXO Fixed HD Camera



FRONT BODY ASSEMBLY
with WINDOW included
RP40-EXFF01 (PRESSURIZED)
RP40-EXFF02 (VANDAL RESISTANT)

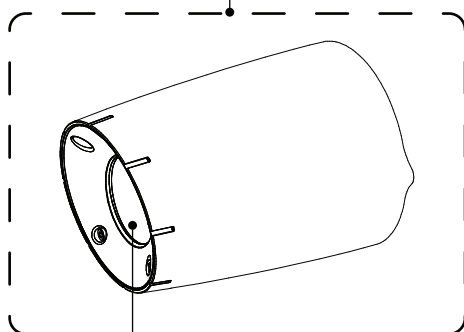


WINDOW
RP30-VL4489 (PRESSURIZED)
RP30-VL4464 (VANDAL RESISTANT)

WALL MOUNT ASSEMBLY
RP40-PFHWMG

 REAR BODY ASSEMBLY
CONTACT MOOG FOR REPAIR/REPLACEMENT
EXFRP01
EXFRV01

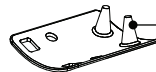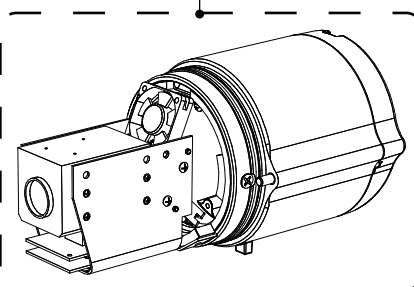

WALL MOUNT GASKET
RP96-GK3880

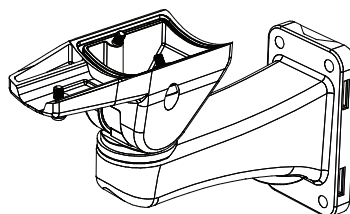

PRODUCT SAFETY WARNING



Moog, Inc. Recommends the following addendum instruction be done by someone equipped with the correct tools and training. In addition to these instructions, a working knowledge of the disassembly/reassembly procedures is required. If the 12 volt DC input setting is not possible at your field location, please contact Moog for further assistance. Please read the entire instruction thoroughly before beginning the modification to allow for 12VDC.

WARNING

TURN OFF ANY POWER TO UNIT
PRIOR TO BEGINNING 12V DC PROCEDURE

A1

DETAIL A
FACING REAR OF ENCLOSURE

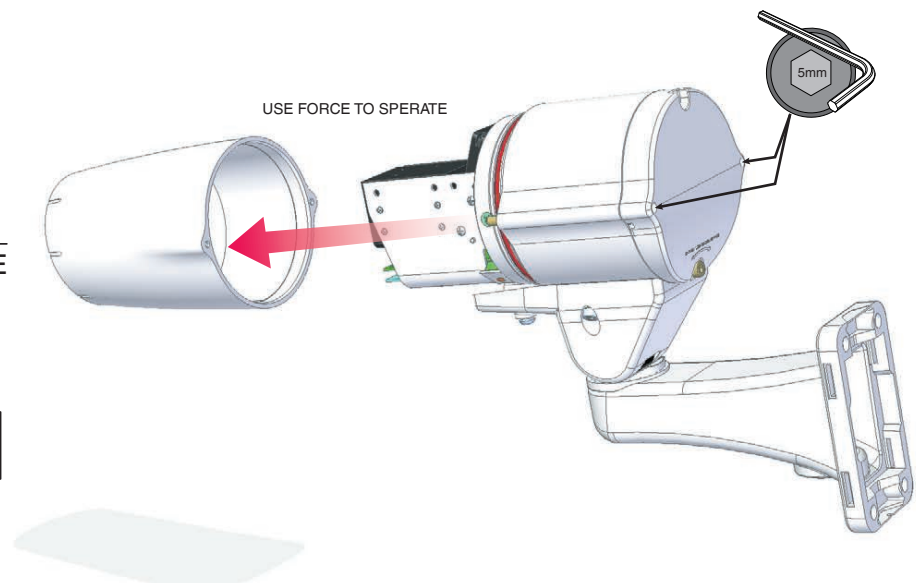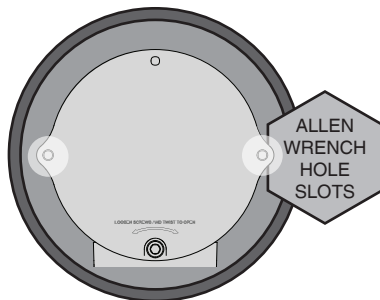


Thoroughly loosen the (2) captive screws (shown in DETAIL A) with provided 5mm Allen Key (included) to remove the front part of the camera system.

- Completamente afloje los dos (2) tornillos (que se muestra en detalle A) con la llave Allen de 5 mm suministrado (incluido) para quitar la parte frontal del sistema de cámaras.
- Complètement desserrer l'(2) vis imperdables (représenté en détail A) avec fourni 5mm Clé Allen (inclus) pour retirer la partie avant du système de caméra.
- Gründlich lockern die (2) unverlierbaren Schrauben (im Detail gezeigt) versehen mit 5mm Inbusschlüssel (im Lieferumfang enthalten), um den vorderen Teil des Kamera-System zu entfernen.
- Completamente soltar a (2) parafusos (mostrados em detalhe A) fornecido com cinco milímetros Chave Allen (incluído) para remover a parte da frente do sistema de câmara.
- Accuratamente allentare la (2) viti di fissaggio (mostrato in dettaglio A) fornito con 5 millimetri chiave a brugola (inclusa) per rimuovere la parte anteriore del sistema di telecamere.

A2

Remove the (2) side screws. These are located directly in front of the O-Ring gasket.


- Quite los (2) tornillos laterales. Éstos están situados directamente enfrente de la junta tórica.
- Retirez les (2) vis latérales. Ils sont situés directement en face de la joint O-Ring.
- Entfernen Sie die (2) seitlichen Schrauben. Diese befinden sich direkt vor der O-Ring-Dichtung.
- Rimuovere le (2) viti laterali. Questi si trovano direttamente di fronte alla guarnizione O-Ring.
- Retire os (2) parafusos laterais. Estes encontram-se directamente em frente da junta O-Ring.

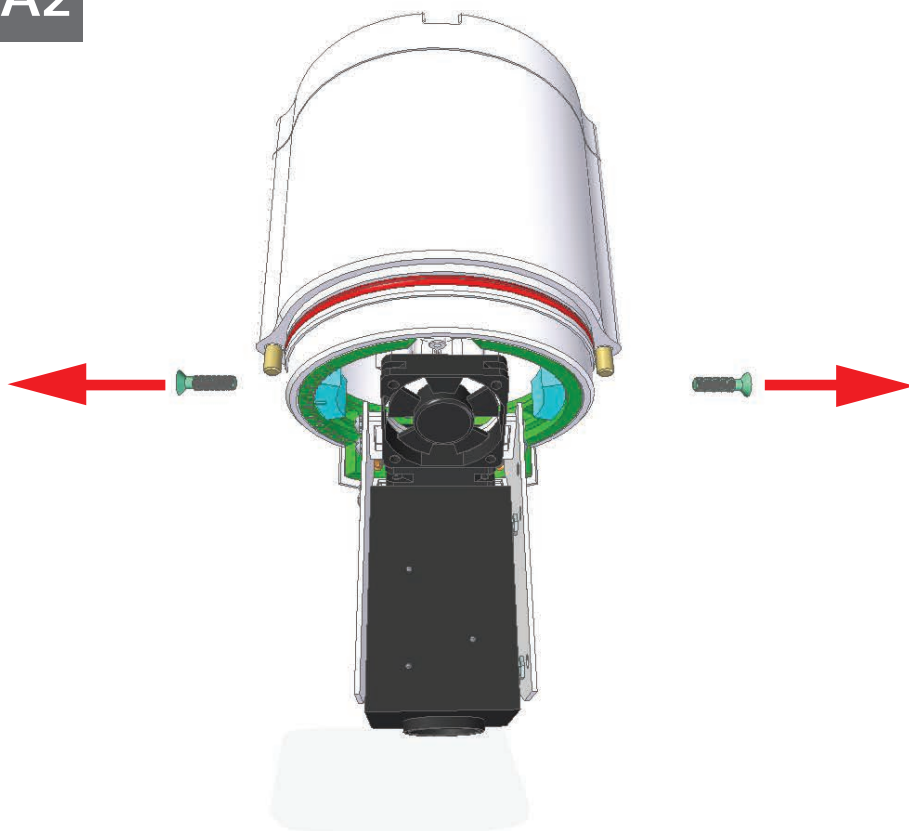

A3


While holding the camera bracket securely, remove the (2) camera bracket ring nuts.

- Mientras sujeta el soporte de la cámara con seguridad, quite los dos (2) cámaras violas soporte.
- Tout en maintenant le support de la caméra en toute sécurité, retirer les deux (2) Support de caméra bagues.
- Halten Sie die Kamera Halterung sicher, entfernen Sie die (2) Kameraschiene Ringmuttern.
- Enquanto segura o suporte da câmara de forma segura, retire os (2) Câmera suporte nozes anel.
- Mentre si tiene la staffa della telecamera in modo sicuro, togliere i (2) fotocamera ghiera staffa.

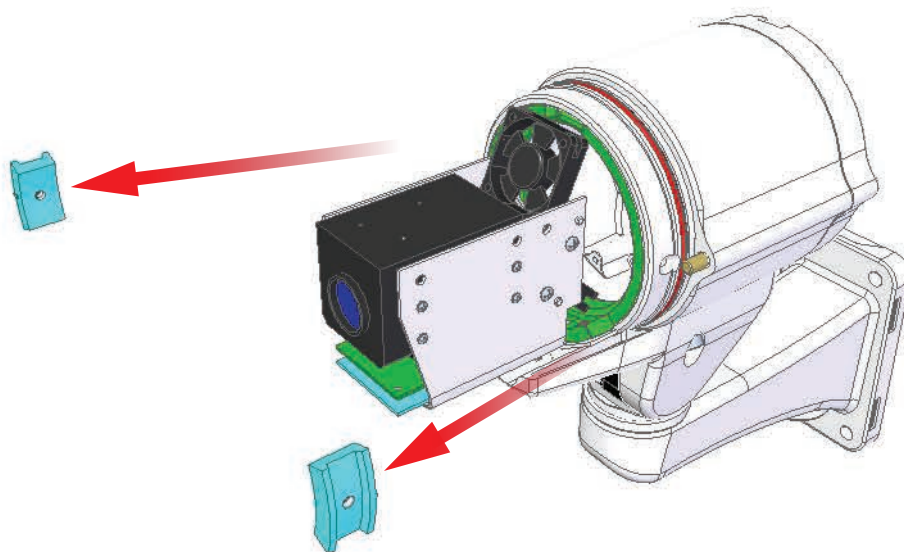

A4

DISCONNECT ALL CONNECTORS (5)

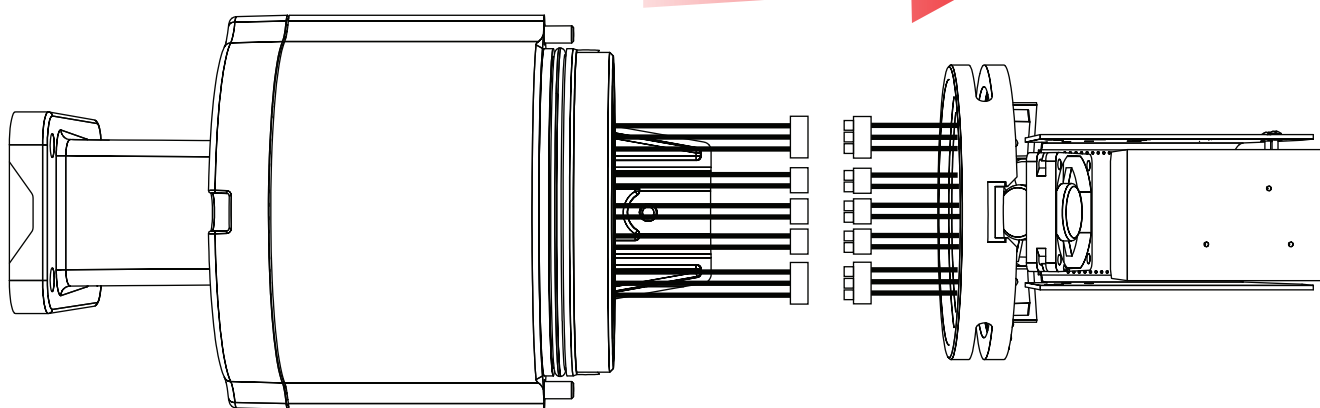


TOP VIEW - CABLE CONNECTION LAYOUT

Disconnect all connectors.


- Desconecte todos los conectores.
- Débranchez tous les connecteurs.
- Trennen Sie alle Anschlüsse.
- Desligue todos os conectores.
- Staccare tutti i connettori.

A5

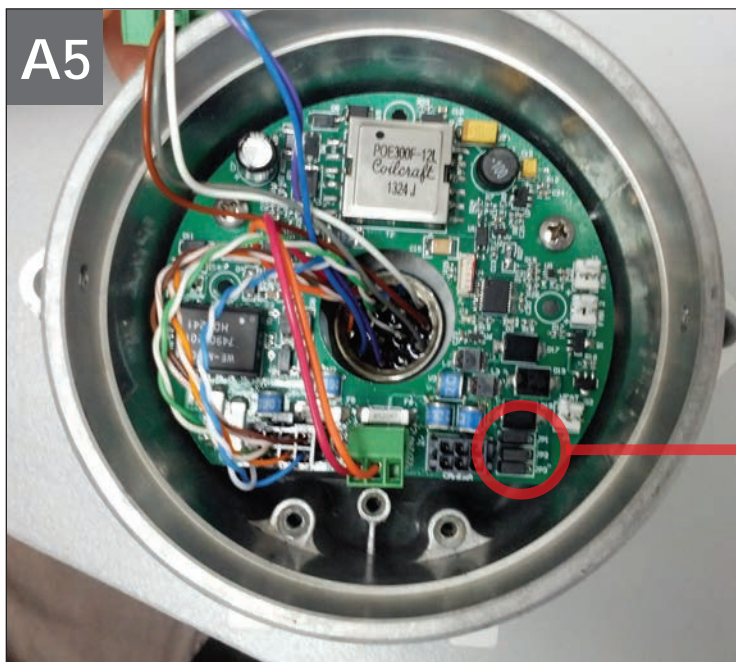

24v & PoE

12v

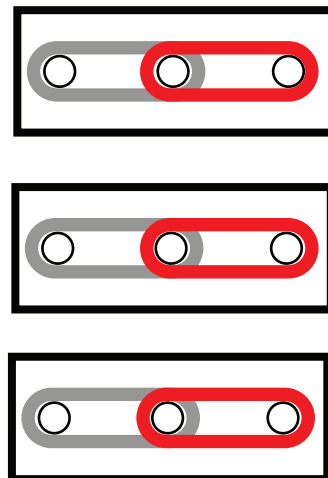


Move all 3 jumpers to the right for 12V mode.

Move jumpers to the correct position (as shown above).

- Mueva los puentes en la posición correcta (como se muestra más arriba).
- Déplacer les cavaliers sur la position correcte (voir ci-dessus).
- Bewegen Sie Jumper in die richtige Position (wie oben dargestellt).
- Mover jumpers para a posição correta (como mostrado acima).
- Spostare i ponticelli nella posizione corretta (come mostrato sopra).

A6

CONNECT ALL CONNECTORS (5)

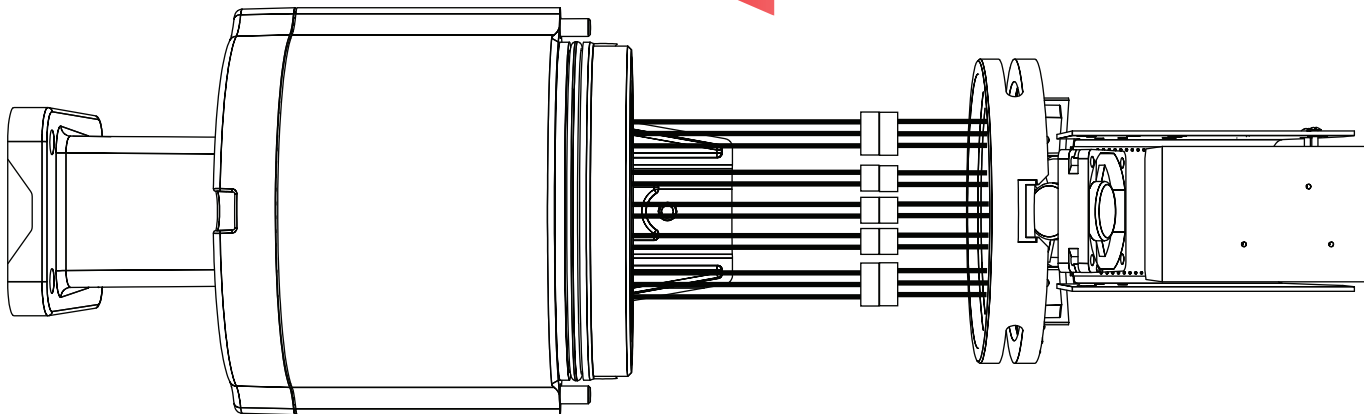


TOP VIEW - CABLE CONNECTION LAYOUT

Reconnect all connectors.

- Vuelva a conectar todos los conectores.
- Rebranchez tous les connecteurs.
- Schließen Sie alle Anschlüsse.
- Volte a ligar todos os conectores.
- Ricollegare tutti i connettori.

A7

PROPER CABLE MANAGEMENT

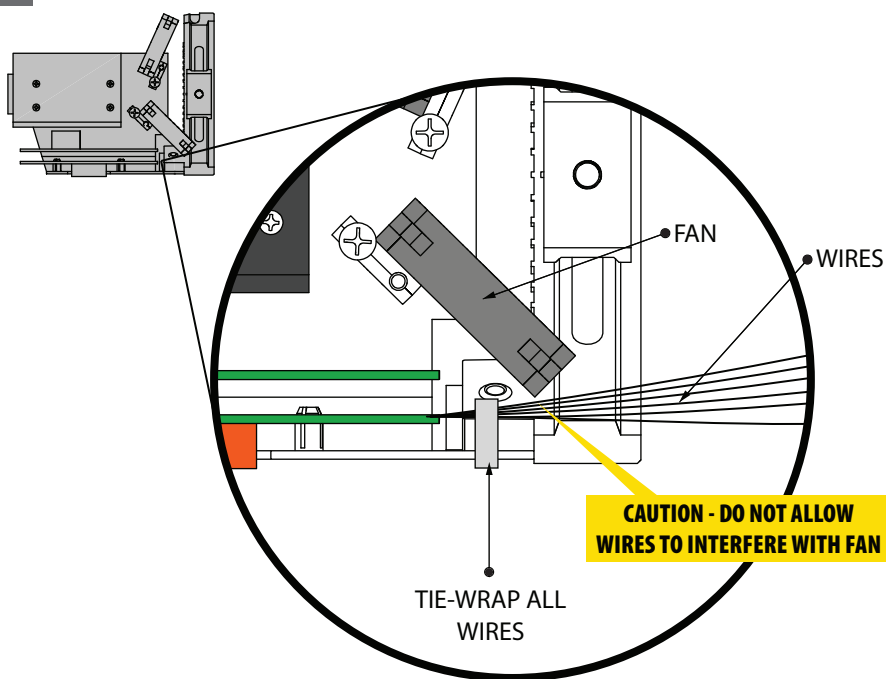


SIDE VIEW
CAMERA BRACKET ASSEMBLY

Do not allow wires to interfere with fan.

- No permita que los cables interfieran con ventilador.
- Ne laissez pas les fils d'interférer avec ventilateur.
- Lassen Sie keine Drähte mit Lüfter stören.
- Não permita que fios de interferir com ventilador.
- Evitare che i fili di interferire con ventola.


A8

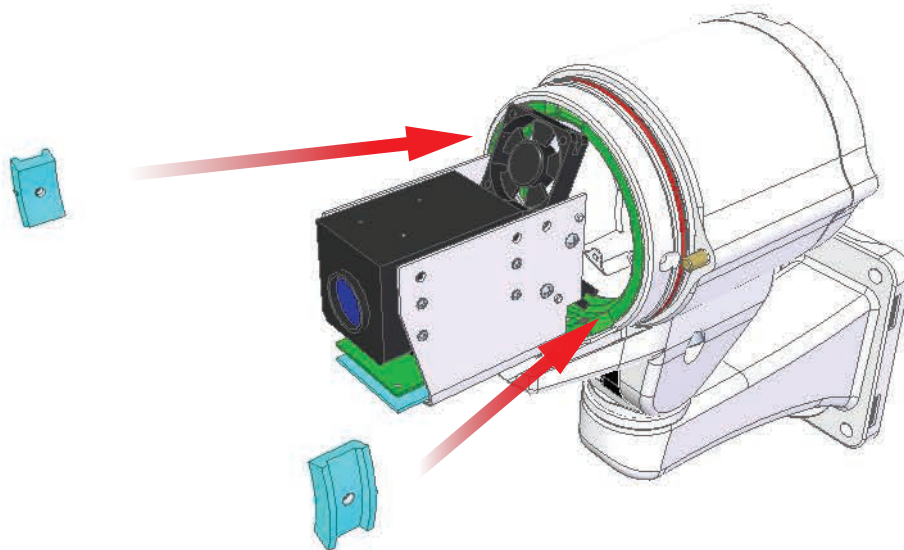

While holding the camera bracket securely, reinstall the (2) camera bracket ring nuts.

- Mientras sujeta el soporte de la cámara con seguridad, vuelva a instalar los dos (2) cámaras virolas soporte.
- Tout en maintenant le support de la caméra en toute sécurité, réinstallez les deux (2) Support de caméra bagues.
- Halten Sie die Kamera Halterung sicher, installieren Sie die (2) Kameranische Ringmuttern.
- Enquanto segura o suporte da câmara de forma segura, reinstale os (2) Câmera suporte nozes anel.
- Mentre si tiene la staffa della telecamera in modo sicuro, reinstallare i (2) fotocamera ghiera staffa.


A9

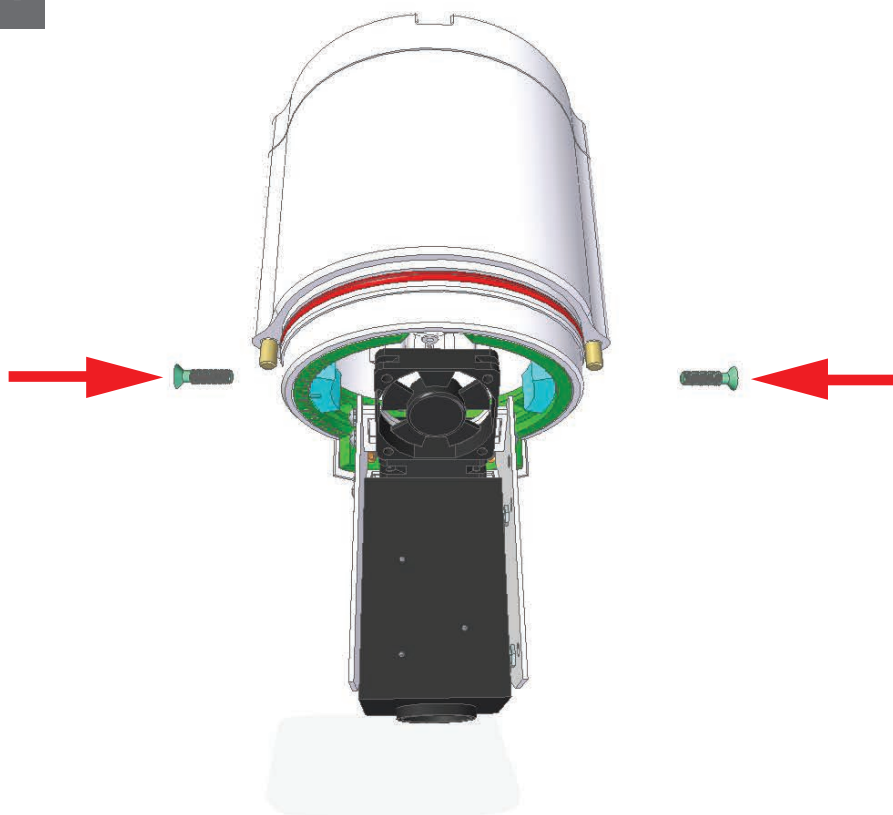

Tightly secure the (2) side screws to the O-Ring gasket.

- Asegure firmemente los (2) tornillos laterales de la junta tórica.
- Bien serrer les deux (2) vis latérales du joint torique.
- Dicht sichern (2) seitlichen Schrauben auf den O-Ring-Dichtung.
- Fortemente protegger os (2) parafusos laterais para a junta de O-Ring.
- Fissare saldamente le (2) viti laterali per la guarnizione O-Ring.

A10

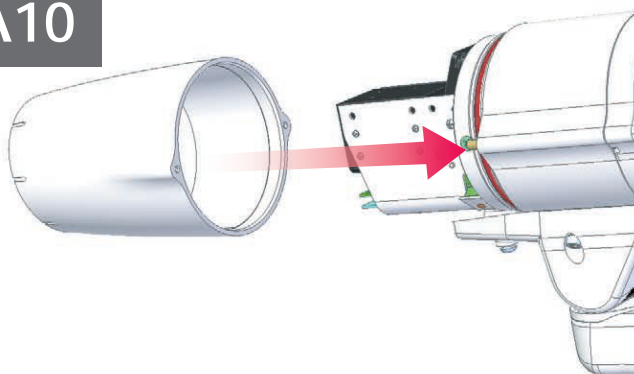

Reinstall front of enclosure and tighten the (2) screws from step 9A.

- Vuelva a instalar delante del gabinete y apriete los (2) tornillos del paso 9A.
- Réinstaller l'avant de l'enceinte et serrer les vis (2) de l'étape 9A.
- Installieren Sie vor der Gehäuse und ziehen Sie die (2) Schrauben aus Schritt 9A.
- Installieren Sie vor der Gehäuse und ziehen Sie die (2) Schrauben aus Schritt 9A.
- Reinstallare Frontale della custodia e stringere le (2) viti dal passo 9A.

TABLE OF CONTENTS

Software Sections

Moog Discovery Tool	1.0.0
Using the Moog EXO Web Application	2.0.0
System Status	2.1.0
System Configuration	2.2.0
Configuration / Date Time	2.2.1
Configuration / Network	2.2.2
Configuration / Network / DHCP	2.2.3
Configuration / Network / Host Name Configuration-NPT ..	2.2.4
Configuration / Network / HTTP	2.2.5
Configuration / Network / API - Bonjour	2.2.6
Configuration / Network / SNMP Configuration	2.2.7
Configuration / Network / RTSP Configuration	2.2.8
Configuration / Network / Multicast	2.2.9
Configuration / Video In	2.3.0
Configuration / Video In / Video Input	2.3.1
Configuration / Video In / Sensor	2.3.2
Configuration / Video In / Video Compression	2.3.3
Configuration / Video In / Point to Point	2.3.4
Configuration / Video In / Text Overlay	2.3.5
Configuration / Video In / Motion Detection	2.3.6
Configuration / Video In / Privacy Zones	2.3.7
Configuration / Audio In	2.3.8
Configuration / Audio Out	2.3.9
Configuration / Recording	2.4.0
Configuration / User Accounts	2.4.1
Maintenance	3.0.0
Live Viewer	4.0.0
Live Viewer Pan / Tilt and Presets	4.1.0
Recording	5.0.0
Performing Batch Firmware Update	6.0.0
Point to Point Connections	7.0.0
Troubleshooting Guide	8.0.0

SOFTWARE SETUP

1.0.0 Moog Discovery Tool

By factory default, the Moog EXO Camera is configured in DHCP. If you are not using a DHCP server it will automatically allocate itself an APIPA (Automatic Private IP Addressing) address in the range 169.254.0.1 to 169.254.255.254 with subnet mask 255.255.0.0.

Initial device network configuration is done via the Moog Discovery Tool (MDT), a tool provided by Moog that can be found on the company's web site and on the flash drive supplied with each camera system. The flash drive also contains a copy of Microsoft Silverlight 5. Both programs should be installed on your local server.


The MDT plays 3 important roles:

1. Discovery of all Moog EXO Cameras
2. Allows for remote configuration of the IP address and subnet mask
3. Permits batch firmware upgrade of all common EXO devices

Note: Silverlight is a free plug in and is required to interface with the Moog EXO Web browser.

Once your device is installed on your network and powered up, launch MDT from any computer on the network and the following window will be displayed:

The MDT supports 2 ways to discover a device. The first way doesn't need any configuration and uses the Bonjour discovery protocol. In order to be able to discover a device via Bonjour, the network must support multicast delivery.

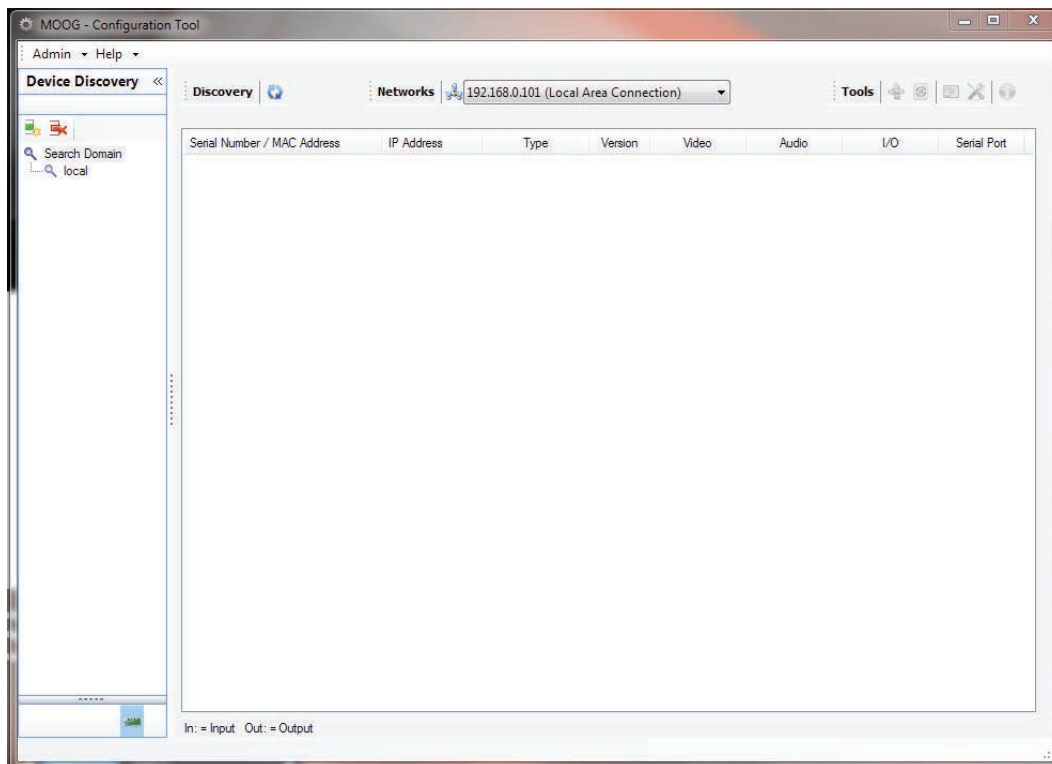

If it is not the case, you can use the second way, which is the Unicast Discovery. The Unicast Discovery can be configured by using the "Unicast Discovery" configuration form. This configuration form is available via the Admin / Unicast Discovery menu option.

Unicast Discovery

Start Address: 10 . 190 . 210 . 1 End Address : 10 . 190 . 210 . 255

Ping Timeout (ms): 1000

10.190.210.1 - 10.190.210.255

To configure the Unicast Discovery, add one or more IP address ranges. The Unicast Discovery tries to reach a device at a specific IP address in the configured ranges. The discovery can be a long process if the range of IP addresses is large and the device is at the end of the range. To accelerate the discovery, add several small ranges of IP addresses. The ping timeout option can be increased for a high latency network.

The MDT will display as many devices as it discovers on the network

MOOG - Configuration Tool

Admin Help


Device Discovery <<

Discovery Networks 192.168.0.101 (Local Area Connection) Tools

Serial Number / MAC Address	IP Address	Type	Version	Video	Audio	I/O	Serial Port
✓ 38:A8:51:01:00:0C	192.168.0.110	MOOG-EXO-HD	3.3.0.2	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1
✓ 38:A8:51:01:00:15	192.168.0.112	MOOG-EXO-HD	3.3.0.2	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1
✓ 00:22:CB:00:4B:DA	192.168.0.103	MOOG-EXO-HD	3.3.0.1	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1
✓ 38:A8:51:01:00:1F	192.168.0.107	MOOG-EXO-HD	3.1.0.0	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1
✓ 38:A8:51:01:00:21	192.168.0.106	MOOG-EXO-HD	3.1.0.0	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1
✓ 00:22:CB:00:4B:DC	192.168.0.100	MOOG-EXO-HD	3.3.0.2	In: 1 Out: 0	In: 1 Out: 1	In: 2 Out: 1	1

In: = Input Out: = Output

If no DHCP server was able to assign an IP address to a Moog EXO Camera, it will appear in the MDT device list with an APIPA address (169.254.*.*). If a Moog EXO Camera displays an APIPA address it must be configured with a valid IP address before it can be remotely configured by selecting assign IP address from the selection list and configuring the TCP / IP settings.

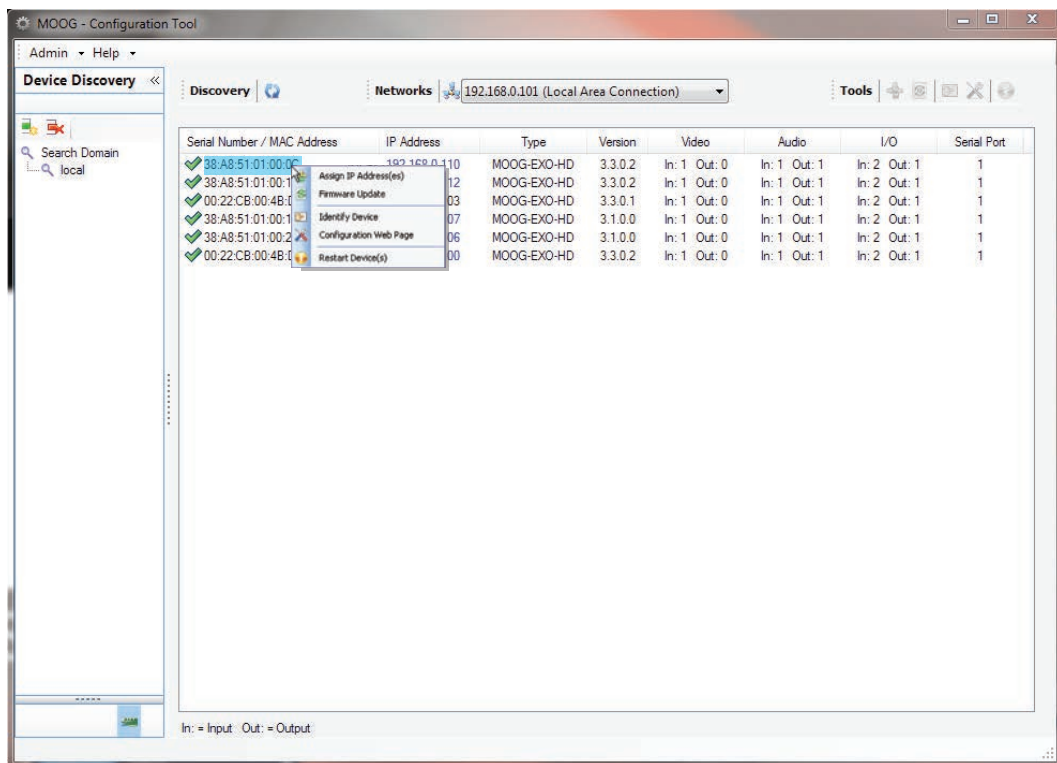

To assign IP Address, update firmware, or configure Moog web interface, right click on highlighted serial number / Mac Address.

IP Address Assignment

Start Address: . . .

Subnet Mask : . . .

Gateway : . . .

Status

Assign IP Address(es)


Once the IP information is set, the Silverlight web application served by the EXO Camera can be launched from the MDT or directly in your web browser by typing the device's IP address in the address bar. You can start to use your networked video management system for final system configuration or you can configure advanced parameters using the Moog EXO web based management.

2.0.0 Using the Moog EXO Web Application

Application


When entering the Web Application, the following window will be displayed. You will be asked a username and password. The default User name and Password is 'admin'.

(To reset the user name and password see / Configurations / User Accounts)

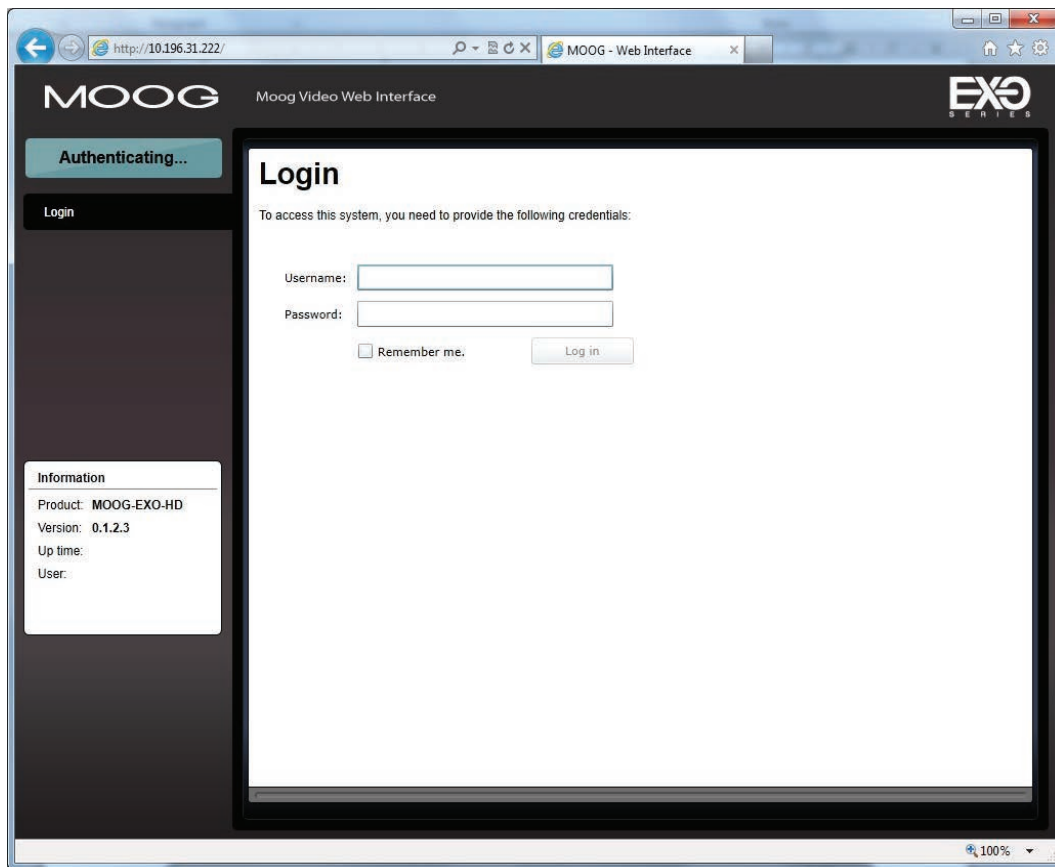


The screenshot shows a web browser window with the address bar displaying `http://10.196.31.222/`. The browser tab is titled "MOOG - Web Interface". The page header features the "MOOG" logo on the left and the "EXO" logo on the right, with the text "Moog Video Web Interface" in the center. The main content area is titled "Login" and contains the following text: "To access this system, you need to provide the following credentials:". Below this text are two input fields: "Username:" and "Password:". There is a "Remember me." checkbox and a "Log in" button. On the left side of the page, there is a sidebar with a "Login" button and an "Information" box. The "Information" box contains the following text: "Product: MOOG-EXO-HD", "Version: 0.1.2.3", "Up time:", and "User:". The browser window also shows a "100%" zoom level at the bottom right.

2.1.0 System Status

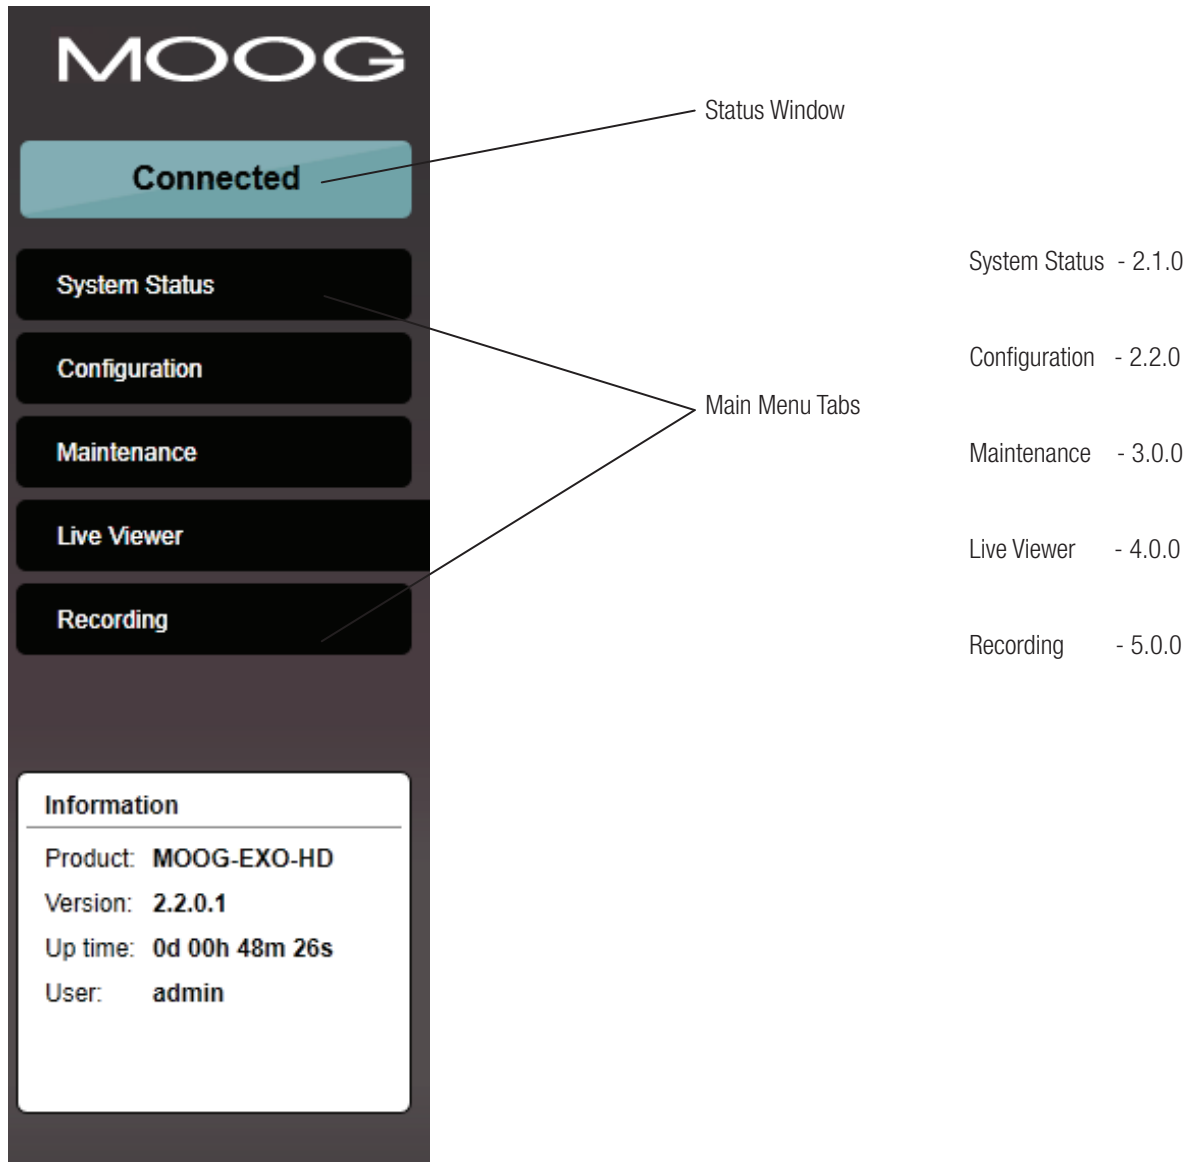

Upon successfully logging into the web interface, a welcome screen will be displayed. The welcome screen shows general device health status as well as firmware version and system uptime.

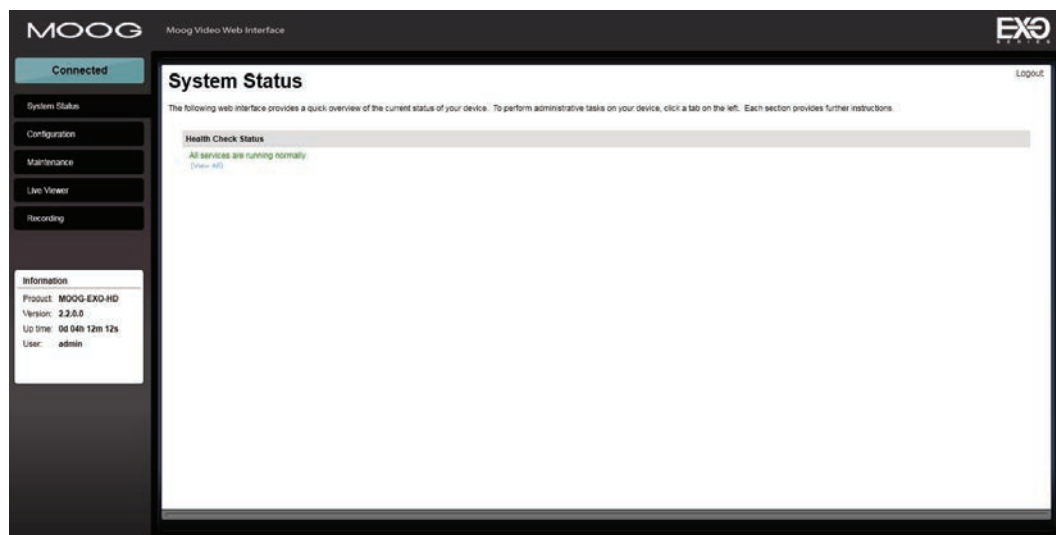

2.2.0 System Configuration

Configuration / System

Under the *Configuration* section, select the *System* tab to perform the following operations:

- View product model information, current firmware version and serial number.
- Specify a custom name; this name can be used by third-party software to display a selected name for the device.

Configuration

Please select from the following subsections:

The screenshot shows a configuration window titled 'System Configuration'. At the top, there are several tabs: 'System', 'Date / Time', 'Network', 'Video In', 'Audio In', 'Audio Out', and 'User Accounts'. The 'System' tab is currently selected. Below the tabs, there is a 'General' subsection with a 'Hide' button on the right. The 'General' section contains the following fields:

Product type:	MOOG-EXO-HD-12X
Serial number:	M100-3130-8000-0019
Firmware version:	3.3.0.3.8984
Custom name:	<input type="text" value="Unknown"/>
Use Recorder Module	<input type="checkbox"/>

At the bottom of the window, there are two buttons: 'Save' and 'Cancel'.

- Enable edge recording by checking the “Use Recorder Module” checkbox. Disabling edge recording will accelerate the device’s boot time.
- To enable edge recording an SD card must be added to the camera interface card, located in the EXO system device.
SD cards are not provided as a standard feature. Directions for installing the SD card are provided in the first section of this installer manual. Edge recording set up is done through the Recording Tab in the Live Viewer EXO screen.
- Note: Recording menu will only be displayed when user recorder module check box is selected. You must save, and then reboot to complete selection.
- SD Card: Use 2GB to 32 GB Micro SD Card of class 6 or above. You must make sure the card is formatted to FAT32 or EXT3.

2.2.1 Configuration / Date Time

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Hide

Current UTC Time: 05/06/2013 10:27:41

Date / Time Update

Hide

Time zone: (GMT) Coordinated Universal Time

Update UTC Time: 05/06/2013 09:08:37 Sync

Save Cancel

Under the **Configuration** section, select the **Date Time** tab to perform the following operations:

- Set the time zone in which the device is operating.
- Manually set the current date and time for the device's internal clock.
- Note: For an accurate time stamp, you must sync UTC Time.

2.2.2 Configuration / Network

Configuration / Network

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

Network Interface #1 - Local Area Connection - eth0

Hide

☒ Use DHCP

IP address: 192.168.0.100 Subnet mask: 255.255.255.0 Default gateway: 192.168.0.1

Host Name Configuration

Show

NTP Configuration

Show

HTTP Configuration

Show

API Selection

Show

Bonjour

Show

SNMP

Show

RTSP Configuration

Show

Multicast

Show

2.2.3 Configuration / Network / DHCP

Under the **Configuration** section, select the **Network** tab to perform the following operations:

- Set the camera's IP parameters; DHCP or static IP information.
- Configure an NTP server to allow the device to automatically update its internal clock using an NTP server.

2.2.4 Configuration / Network / Host Name Configuration-NPT

Host Name Configuration		Hide
Host name:	<input type="text"/>	
NTP Configuration		Hide
NTP server address:	<input type="text"/>	

NPT Server- use when desiring to have local network time as default, to do so you must enter the IP address on the local NPT server used on the network.

2.2.5 Configuration / Network / HTTP

- Change the device's HTTP configuration, **Note: Avoid changing these settings unless absolutely necessary.**

HTTP Configuration		Hide
HTTP port:	<input type="text" value="80"/>	(1 - 65535)
HTTPS port:	<input type="text" value="443"/>	(1 - 65535)
Authentication mode:	<input type="text" value="Digest"/>	
	<input checked="" type="checkbox"/> Accept HTTPS connections	
	<input type="checkbox"/> Accept HTTPS only	

2.2.6 Configuration / Network / API- Bonjour

NOTE:

- To control the EXO Camera system with a VMS software system, you must enable the required Network APIs. Enable PSIA or GENETEC API depending on which VMS platform you intend to use with the device. Disabling any unrequired APIs will accelerate boot time.

API Selection		Hide
	<input type="checkbox"/> PSIA	
	<input type="checkbox"/> GENETEC API	
Bonjour		Hide
Search domain:	<input type="text"/> .local	
	<input checked="" type="checkbox"/> Bonjour Discovery Enabled	

- Note: ONVIF standard is built in and does not require activation. If using ONVIF you do not need to select an API.
- Set Bonjour discovery protocol settings.
- Modify SNMP settings to match with any SNMP software you wish to use for monitoring the device.

2.2.7 Configuration / Network / SNMP Configuration

SNMP		Hide
Agent Port:	<input type="text"/> 161 (1 - 65535)	
Enabled:	<input checked="" type="checkbox"/> V1 <input checked="" type="checkbox"/> V2 <input checked="" type="checkbox"/> V3	
V1/V2 Read Community:	<input type="text"/> public	
V1/V2 Write Community:	<input type="text"/> public	
V3 Security:		
Users:	<input checked="" type="checkbox"/> Allow users with Administrator-level rights	
	<input checked="" type="checkbox"/> Passwords shorter than 8 characters will be repeated to fill 8 characters.	
Authentication Method:	<input type="text"/> None	
Privacy Method:	<input type="text"/> None	
Privacy Passphrase:	<input type="text"/>	

2.2.8 Configuration / Network / RTSP Configuration

RTSP Configuration		Hide
RTSP server port:	<input type="text"/> 554 (1 - 65535)	
Session Timeout:	<input type="text"/> 30 (1 - 120)	
Authentication mode:	<input type="text"/> Digest	

2.2.9 Configuration / Network / Multicast

If using Multicast output, Insert Multicast start IP, and select start port.

Multicast		Hide
Multicast start IP:	<input type="text"/> 237.0.0.1	
Multicast start port:	<input type="text"/> 40000 (1 - 65535)	
Multicast TTL:	<input type="text"/> 1 (1 - 255)	

2.3.0 Configuration / Video In

2.3.1 Configuration / Video In / Video Input

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In


Audio In

Audio Out

User Accounts

Preview

Hide

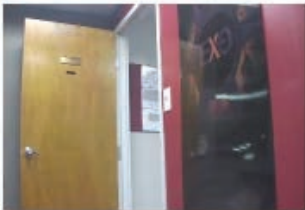Image:

Refresh

General

Hide

☒ Enable video input

Digital Format

720p60

Wide Conversion

Stretch

Associated audio:

Audio Input 1

Under the Configuration section, select the Video In tab to perform the following operations:
Digital format – choices are, 720 50fps, 720 60fps.

2.3.2 Configuration / Video In / Sensor

Configure camera bloc / sensor parameters. These parameters will also be saved to the camera bloc itself if possible:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Show

Sensor

Hide

Mirror

None

☒ Auto Focus

☐ Wide Dynamic Range

☐ IR Cut-Retractable (ICR):

☒ Auto ICR

Auto ICR Threshold:

5

(0 - 100)

White Balance:

Outdoor Auto

Auto Exposure:

Auto

☒ Enable Digital Zoom

Zoom

Initial:

0

(0 - 100)

Current *:

0

(0 - 100)

Digital Zoom

Initial:

0

(0 - 100)

Current *:

0

(0 - 100)

☐ Use Transparent Port

Reset Sensor

* Make sure to reload the current values before using them, they may change without the current page being updated

Use the narrow pull down function for vertical and horizontal rotation of the image.

Configure video compression parameters for any of the three available codec instances (Primary H.264, Secondary H.264 and MJPEG). Most VMS software solutions will interact with these parameters and thus it is suggested to leave these at default values in the web interface.

VBR aggressiveness however is unique to Moog EXO Cameras and proposes various levels (disabled to aggressive) of motion triggered rate control. The more aggressive the setting, the more variation motion will have on the rate control. It is strongly suggested to disable VBR aggressiveness for low bit rate scenarios (below 1Mbps) as this parameter may negatively affect perceived video quality.

2.3.3 Configuration / Video In / Video Compression

Video Compression

Hide

Select An Encoder :

Primary H.264

☒ Enable encoder

Profile:

main

Resolution:

720/60x720/50

Frame per sec (fps):

4

(1 - 250)

Target bit rate (bps):

1000000

(10000 - 4000000)

Rate control:

Constant Rate

Minimum QP:

16

(16 - 51)

Maximum QP:

51

(16 - 51)

Intra Interval:

8

(0 - 1000)

VBR Aggressiveness:

Disabled

Multicast IP:

224.16.17.1

☐ Static

Disabled

Conservative

Moderate

Aggressive

Set Quantization (QP) level to desired rate. The higher the number the greater the compression. (16 very low, 51 very high)

- Frame Rate**
 - Allows you to specify the frame rate to be used by the codec.
- Rate Control**
 - Allows you to choose between **Variable Bit Rate** and **Constant Bit Rate**. The first option will instruct the H.264 codec to dynamically adjust the bit rate in order to meet both the target quality (QP) and frame rate settings. The second option will instruct the H.264 codec to prioritize target bit rate and vary quality (QP) first and frame rate as a last resort.
- Min/Max QP**
 - This parameter allows you to specify the compression range that the codec will use to determine image quality during compression. In order to force a specific quality setting, you can set the minimum and maximum to the same value. The lower the value, the better the quality will be.
- VBR Aggressiveness**
 - This parameter allows you to specify if the codec should take into account the level of motion in the image for bit rate calculations. You can select from **Conservative**, **Moderate** and **Aggressive** options for this setting. Using the *Conservative* option, the codec will allow bit rate to drop up to $\frac{3}{4}$ of the configured target bit rate when no motion is detected in the image. Using the *Moderate* option, the codec will allow bit rate to drop up to $\frac{1}{2}$ of the configured target bit rate when no motion is detected in the image. Using the *Aggressive* option, the codec will allow bit rate to drop up to $\frac{1}{4}$ of the configured target bit rate when no motion is detected in the image. You can disable this feature by selecting the **disabled** option.

2.3.4 Configuration / Video In / Point to Point

- Configure point to point video connections (up to three) for creating persistent video streams from the encoder to a network endpoint.

Point to Point Hide

Select a Connection : Point to Point 1

☐ Enabled

Description:


Encoder: Primary H.264

Destination IP:

Destination Port: (1 - 65535)

2.3.5 Configuration / Video In / Text Overlay

Text Overlay Hide

Image: 

☒ Enable

String Size: Medium

String Position:

String Text: Text Box

(Set it to %dz for current date and time and to %tz only for the time)

To insert a text overlay:

- There are (2) available strings (Text blocks). Select string.
- Select string size.
- For string position click mouse inside string position box.
 - o Text bar will appear on video image.
 - o If you wish to relocate, simply click in desired position.
 - o Type desired text into String Text Box.
 - o Press Save Button.

2.3.6 Configuration / Video In / Motion Detection

Motion Detection

[Hide](#)

Image:



Refresh

Select a Region of Interest:

Region 1

☒ Enabled

Region Position

0.715,0.506,0.874,0.672

Frame Count

4 (1 - 20)

Sensitivity

95 (0 - 100)

On Threshold

20 (0 - 100)

Off Threshold

10 (0 - 100)

Select from 1 of 4 available regions:


- With mouse click on region position box.
- Bring mouse pointer to view window and drag box around area for motion detection.
- Select desired Frame Count, Sensitivity and Thresholds.
- Press "Save" button to store information.
- You can select up to (4) separate "Motion" windows.
 - Frame count: Number of frames required to trigger motion
 - Sensitivity: No sensitivity, 100 MAX sensitivity
 - Threshold: % of image required to trigger, both thresholds must have a value; "off" value must be lower than "on".

2.3.7 Configuration / Video In / Privacy Zones

Privacy Zones are used to block out video in areas view is not permitted or desired.

Privacy ZonesHide

Image:



Refresh

Current Position Pan -85.78 Tilt -1.54 Zoom 0.00 Refresh Position

Select a Privacy Zone Zone 1

☐ **Enable**

Position

Pan 0.00 (-180.00 - 180.00)

Use Current Tilt 0.00 (-90.00 - 90.00)

Zoom 0.00 (0.00 - 100.00)

Size

Width 100 (1 - 100)

Height 100 (1 - 100)

2.3.8 Configuration / Audio In

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Hide

Sampling rate (Hz):

8000

Gain:

10

(0 - 20)

Compression

Hide

Type:

G711

Mode:

ulaw

Point to Point

Hide

Select a Connection :

Point to Point 1

☐ Enabled

Description:

Destination IP:

0.0.0.0

Destination Port:

0

(1 - 65535)

Save

Cancel

Under the **Configuration** section, select the **Audio In** tab to perform the following operations:

- Configure audio input compression parameters.
- Configure point to point audio connections (up to three) for creating persistent audio streams from the encoder to a network endpoint.

2.3.9 Configuration / Audio Out

Configuration

Please select from the following subsections:

System

Date / Time

Network

Video In

Audio In

Audio Out

User Accounts

General

Hide

Sampling rate (Hz):

8000

Gain:

10

(0 - 20)

Type:

PCM

Point to Point

Hide

☐ Enabled

Description:

☐ Use Multicast

Source Port:

0

(1 - 65535)

Save

Cancel

Under the **Configuration** section, select the **Audio Out** tab to perform the following operations:

- Configure audio output parameters.
- Configure a point to point audio connection for receiving a persistent audio stream from a network endpoint.

Configuration

Please select from the following subsections:

System Date / Time Network Video In Audio In Audio Out Recording User Accounts

☐ Enabled

Current Recorder State: Recording storage not configured

Storage Profile:

General

Hide

NVR Detection Mode: Server Ping

Ping Timeout: 60 (1 - 3600 s)

Ping IP Address: 0.0.0.0

Grooming Mode: Chronological

Maximum File Duration: 120 (120 - 3600 s)

Maximum File Size: 128 (8 - 1024 MB)

Video Input Selection

Show

Per-Input Configuration

Hide

Recording Status: Not Recording...

Record Video From: Primary H.264

Input Record Mode: Do Not Record

☐ Record when connection with the server is lost. (NVR detection required.)

☐ Record on demand.

☐ Record on Motion Event

☐ Record when the specified I/O event occurs. (I/O event input required.)

I/O Event Input:

I/O Event Input State: On

Video Retention Time: 30 (1 - 365 days)

Save

Cancel

Video Input Selection

Hide

Select a video input: Video Input 1

Per-Input Configuration

Hide

Recording Status:

Not Recording...

Record Video From:

Primary H.264

Input Record Mode:

Record On Event

☐ Record when connection with the server is lost. (NVR detection required.)

☒ Record on demand.

☐ Record on Motion Event

☐ Record when the specified I/O event occurs. (I/O event input required.)

I/O Event Input:

I/O Event Input State:

On

Video Retention Time:

30 (1 - 365 days)

☐ Force Immediate Deletion of Video After Retention Time

☒ Mute Audio

Note: Recording Menu will **NOT** be visible unless activated; see 2.20 System configuration.

- Grooming mode; Select method to remove files from full SD card. (Chronological will remove old files first.)

2.4.1 Configuration / User Accounts

Under the *Configuration* section, select the *User Accounts* tab to perform the following operations:

Configuration

Please select from the following subsections:

The configuration window displays the following sections and controls:

- System** | **Date / Time** | **Network** | **Video In** | **Audio In** | **Audio Out** | **User Accounts**
- Authentication** (Hide)
 - Authentication Method: Username/Password
- User Accounts** (Hide)
 - admin (Administrator)
 - Old Password:
 - New Password:
 - New Password:
 - Remove User | Change Password
- New User** (Hide)
 - Username:
 - Password:
 - Password:
 - Role: User, Poweruser, Superuser, Administrator
 - Add User
- Save | Cancel

- Select the web interface's authentication method. A dual passphrase is made available for additional security.
- Manage user accounts which have access to the device.

User Roles:

Administrator:	All is available
Superuser:	All is available except the user management
Poweruser:	All is available except the user management and the recording
User:	Only access basic operations: system information, live video (no position controls), date time management and password change

Maintenance

Please select from the following operations:

Retrieve system information file.

[Click here](#)

Perform a firmware update.

Update

Flash the status LED on the current device.

Identify

Reboot:

Device

Reset device to default settings:

Reset

☐ Include network settings


This section describes how to update your Moog EXO Cameras to newer firmware versions from the web application.

1. To find the latest file go to <http://videolarm.com/technical-support/software-firmware-downloads/>.
2. Click on "EXO Camera Firmware" - click, save file.
3. Navigate to your device's web application using your favorite web browser.
4. Click on the **Maintenance** tab.
5. Click on the **Update** button, locate downloaded firmware. You will be asked for the firmware update file; please select the **.iof** file which was provided by Moog.
6. You will see the following messages indicating the status of the update:
 - o Firmware upload in progress... (100%)
 - Lasts around 95 seconds.
 - o Firmware uploaded. Saving to internal storage... (0%)
 - Lasts around 45 seconds.
 - o Validating and decompressing firmware... (0%)
 - Lasts around 105 seconds.
 - o Firmware ready for installation. Rebooting device... (0%)
 - Web page will disconnect from device until device has rebooted.
 - You will be prompted for login once the device is up again.
 - Lasts around 110 seconds.
 - o Testing firmware stability... (26%)
 - Lasts 120 seconds.
 - o Firmware update complete. (100%)


4.0.0 Live Viewer

Use Live View for:

- Live Camera View
- Start and Stop Recording
- Camera Control
- Setting Presets
- Adjust View Scale

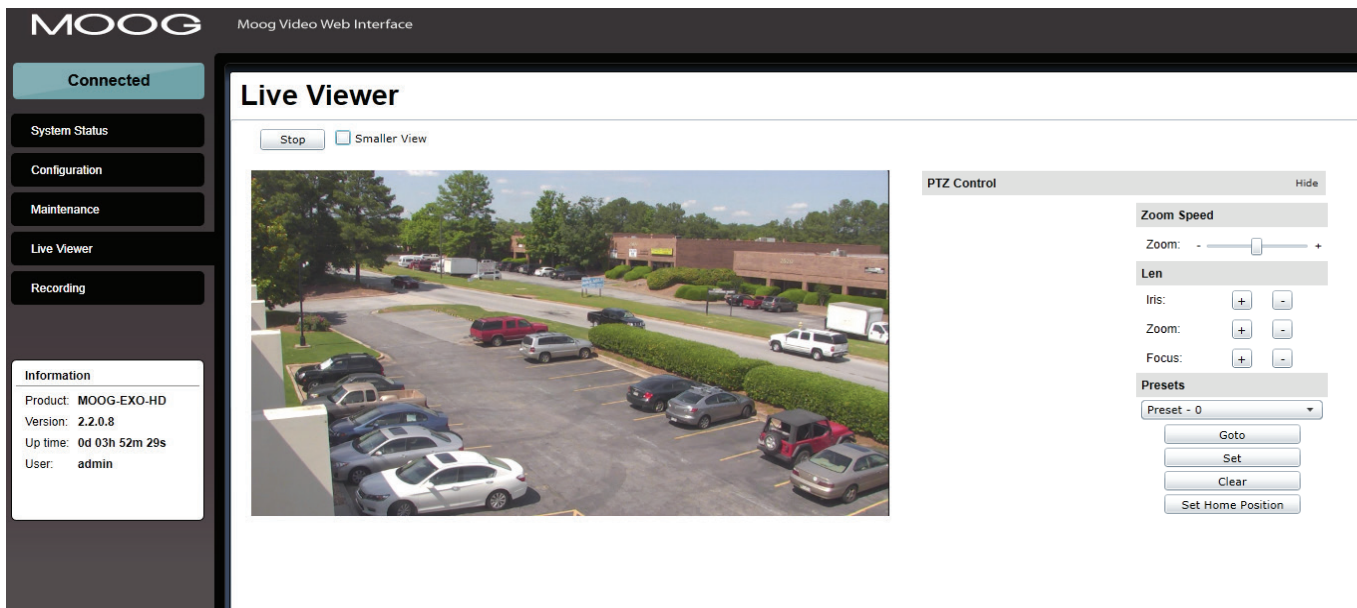

To enable live you must activate by pressing the “Play” button.

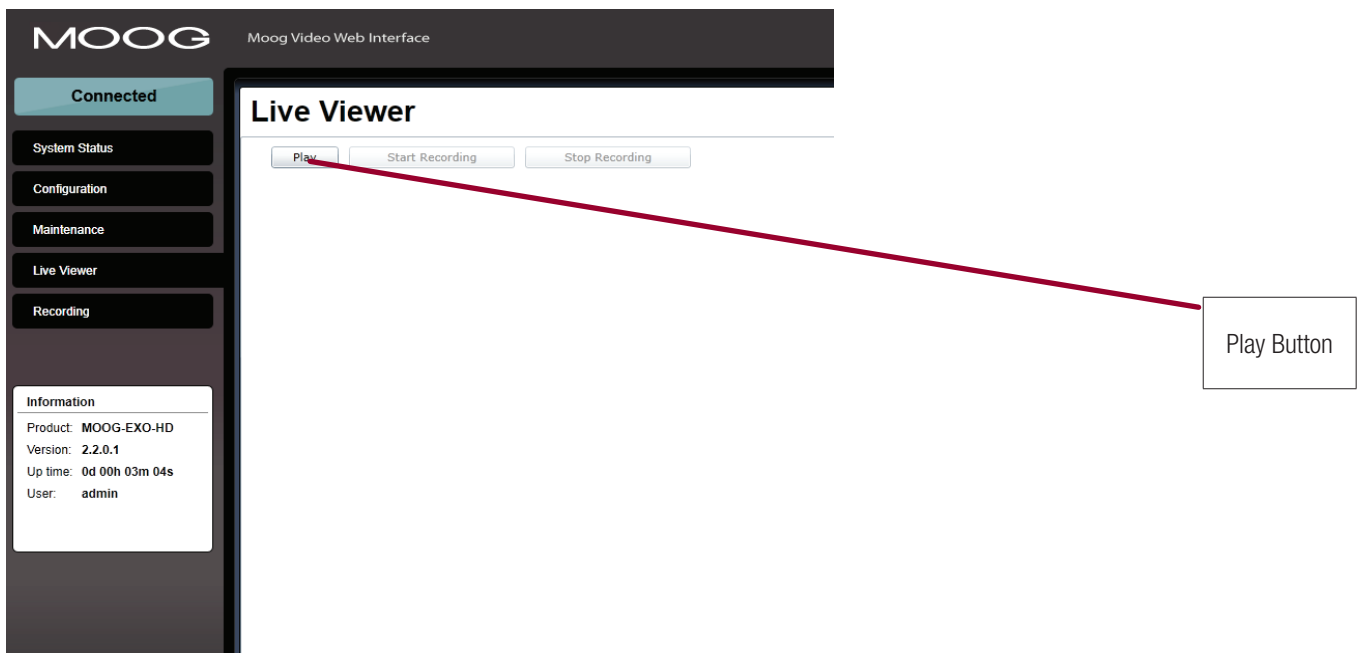


To adjust viewing scale for 1024 x 768 monitor, press smaller view.

4.1.0 Live Viewer Pan / Tilt and Presets

Live Viewer

☐ Smaller View



The screenshot shows a live video feed of a classroom. In the foreground, there is a table with several chairs. On the wall, there is a large whiteboard with horizontal blinds, a round clock, and a wooden door. The interface on the right side of the screen includes a 'PTZ Control' section with a 'Hide' button. Below it is a 'Zoom/Focus Speed' section with sliders for 'Zoom' and 'Focus'. The 'Lens' section has a dropdown menu set to 'Auto' and a 'Lens Control' button. The 'Iris' section has buttons for '+', '-', 'On', and 'Off'. The 'Zoom' section has buttons for '+' and '-'. The 'Focus' section has buttons for '+', '-', 'On', and 'Off'. The 'Presets' section has a dropdown menu set to 'Preset - 0' and a 'Preset Controls' button. At the bottom, there are buttons for 'Goto', 'Set', 'Clear', and 'Set Home Position'.

- Speed Control: To increase speed, slide control knob to the right.
- Lens Function: Use +/- buttons to update Iris, Zoom and Focus.
- Preset Functions.
 - o First Select Preset Number.
 - o Then position Camera and lens to desired position.
 - o Press "Set" to save Preset.
 - o For additional presets, repeat process.
 - o To clear, select desired preset and press "clear".
- Home Position: Move the camera to desired position, press "Set Home Position" – Camera will use this as the default start up position.

5.0.0 Recording

Recording

Select a video input:

[Refresh Video Playback Inputs](#)

To activate recording mode you must go to Configuration / System / Use Recorder Mode. Click "Use Recorder Mode" checkbox. This will activate additional Recording controls in the recording window. You must "Save" and then "Reboot" after making this change.

> Select Video Input

Recording

[Logout](#)

Select a video input:

[Refresh Video Playback Inputs](#)
[Refresh Recorded Video](#)

Time Format:

UTC time

+ 1/1/1970

+ 4/23/2013

+ 4/24/2013

+ 4/25/2013

+ 4/26/2013

> Select Date of the Recording

Recording

[Logout](#)

Select a video input:

[Refresh Video Playback Inputs](#)
[Refresh Recorded Video](#)

Time Format:

UTC time

- 1/1/1970 [Refresh](#)

[Select All](#)

[Lock Selected](#)

[Unlock Selected](#)

[Delete Selected](#)

Clip Start Time: 1:48:15 AM - Duration: 00:00:06



Clip Start Time: 2:00:11 AM - Duration: 00:00:08



Clip Start Time: 2:00:45 AM - Duration: 00:00:12



Clip Start Time: 2:02:27 AM - Duration: 00:00:13



Clip Start Time: 3:46:06 AM - Duration: 00:00:28



+ 4/23/2013

+ 4/24/2013

+ 4/25/2013

+ 4/26/2013

Then select the filed clip you wish to view


Note: You must have either VLC Player or Windows Media Player installed.

6.0.0 Performing Batch Firmware Update


This section describes how to perform a batch update of multiple Moog EXO Camera devices to newer firmware versions from the MDT.

The batch firmware update works by starting a firmware update session. Only one session at time is allowed and only 20 devices can be selected by session.


From the MDT, select one or more devices of the same type.

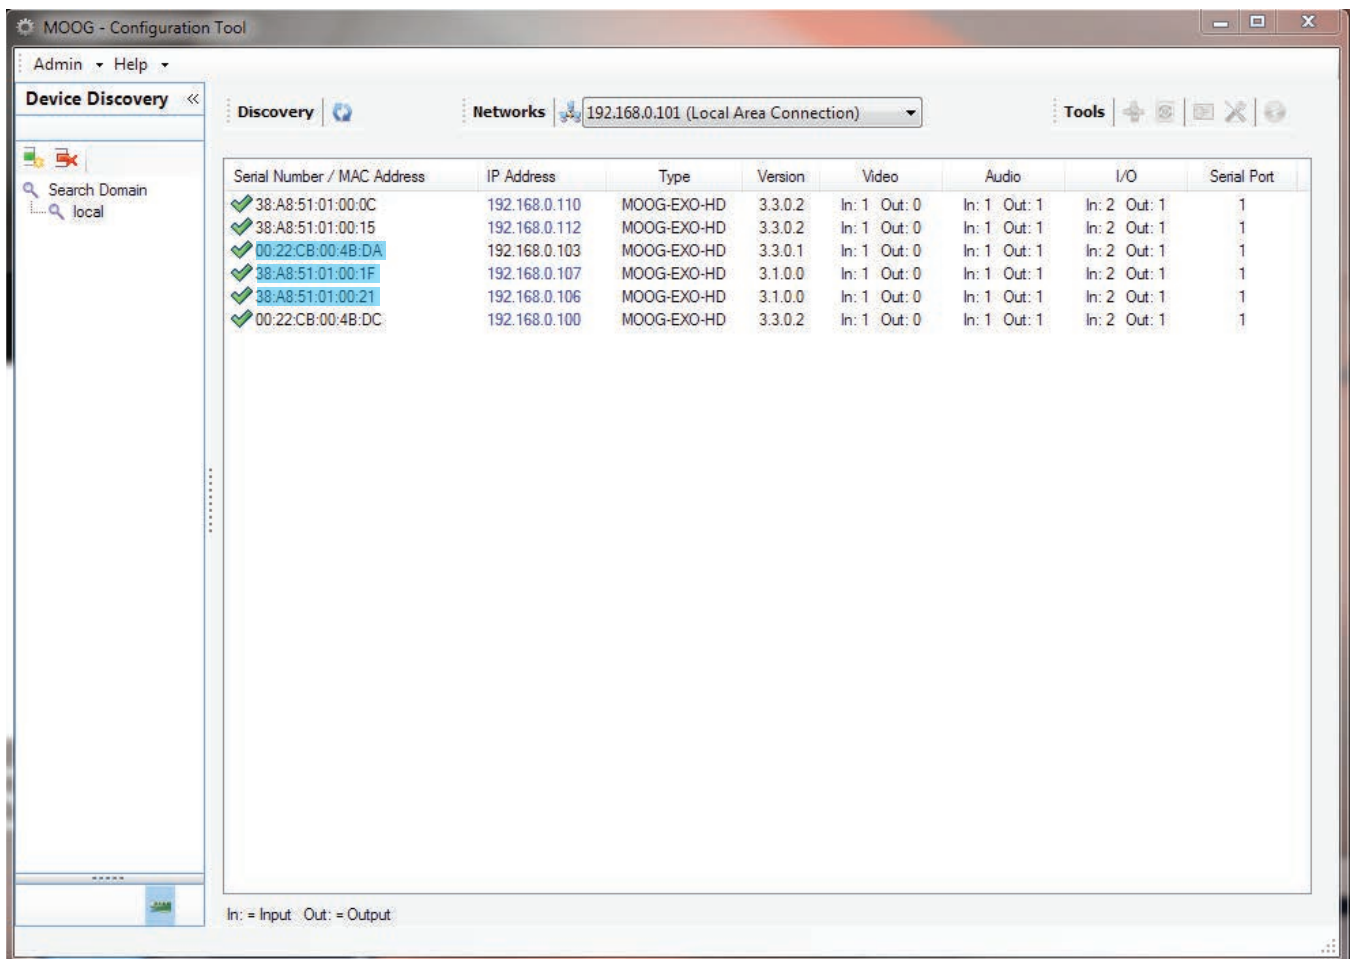


By using the right mouse button on the selected devices, choose the "Firmware Update" menu option.

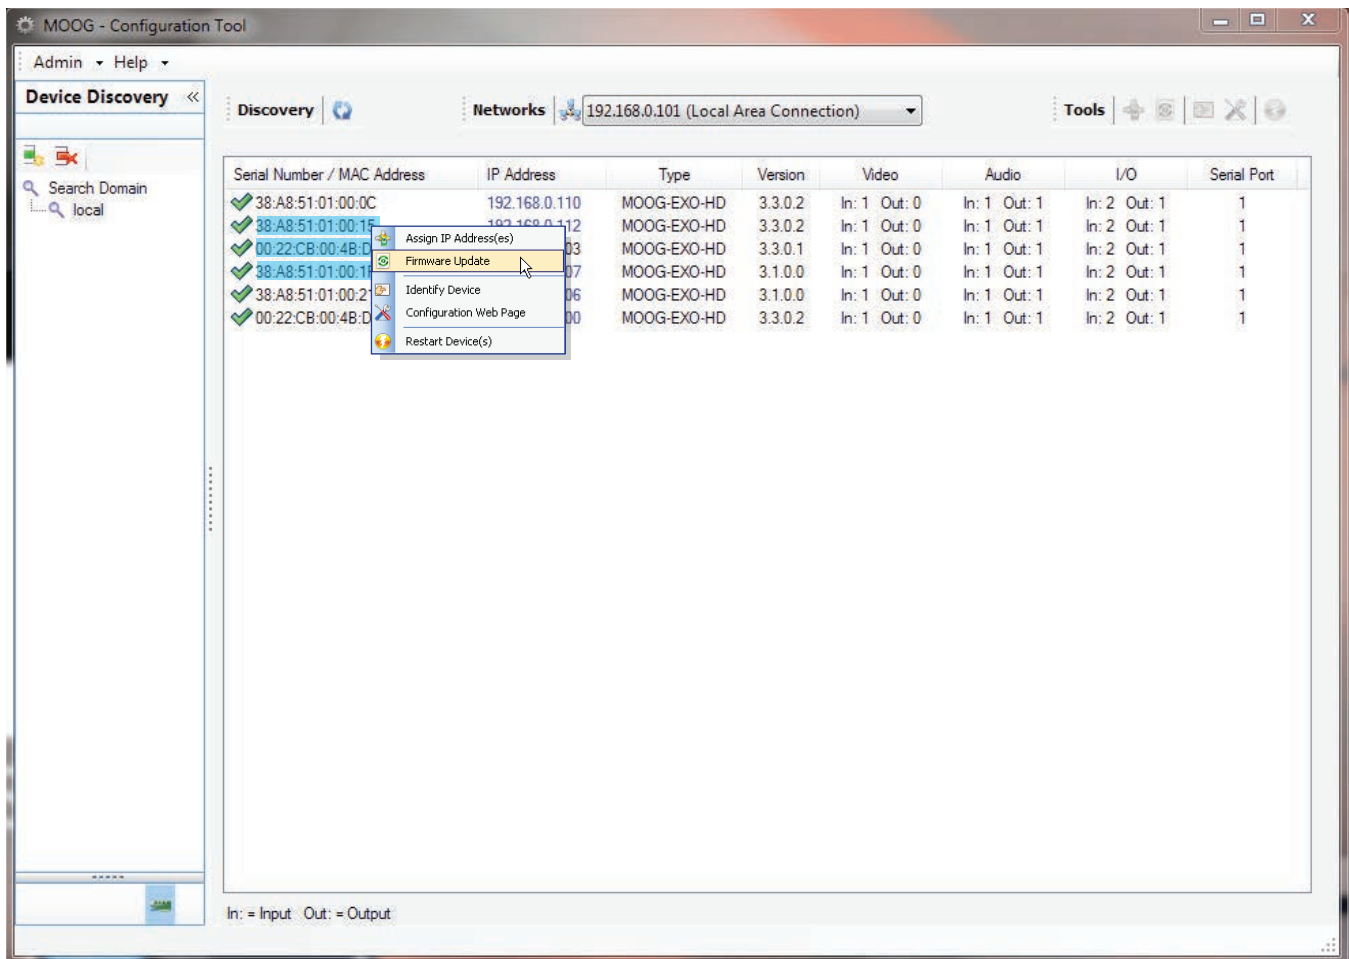

To start a firmware update session, choose the ".iof" file corresponding to the new firmware by clicking to the "Select File ..." button. Once selected, click the "Start" button.

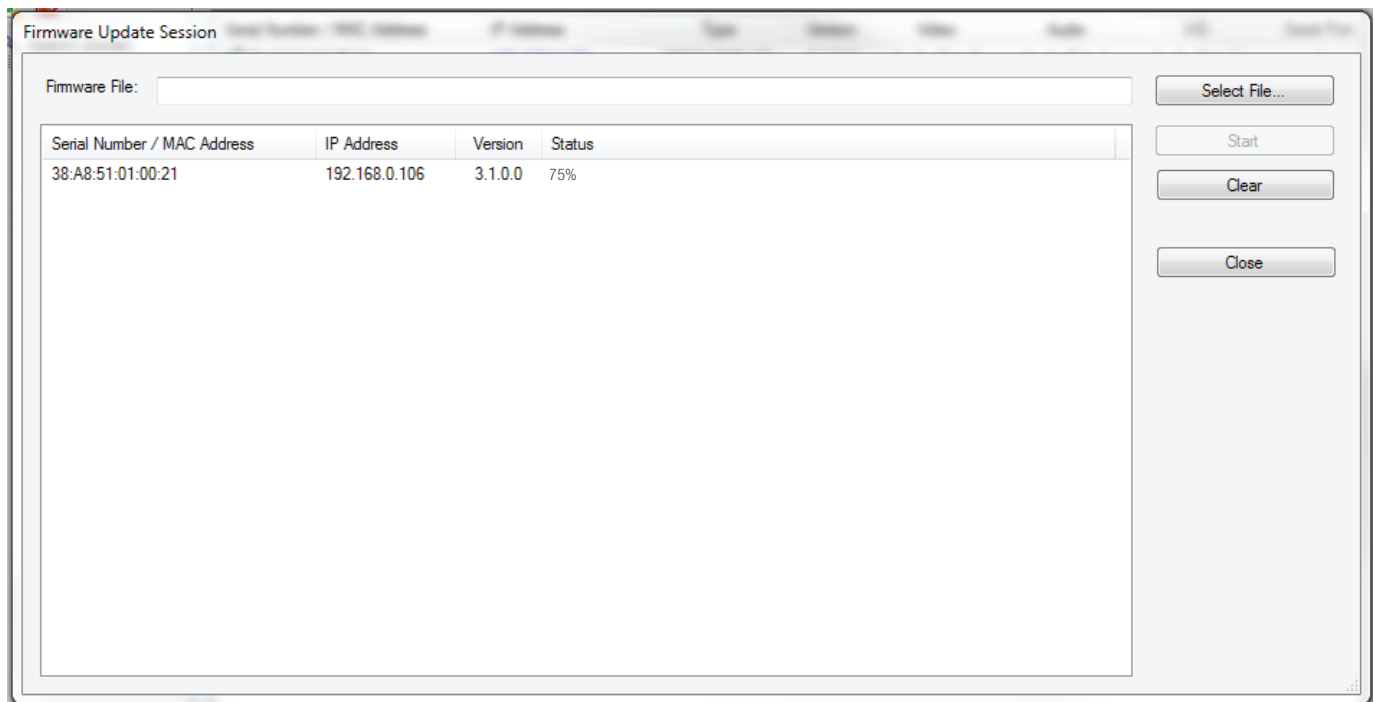

Once started, the "Firmware Update Session" window shows the progress of the firmware update. This window can be closed at any moment without losing the current session.

If closed, the progress of the current session can be followed by reopening the “Firmware Update Session” window by clicking the  button from the “Tools” toolbar.

Once done, clear the current session from the “Firmware Update Session” window and restart a new session if needed.

7.0.0 Point to Point Connections

Point-to-point connections between a Moog EXO Camera and a Decoder can be configured using the device's web application.

In the Moog EXO web application, in the **Configuration** section, go to the **Video In** tab. Scroll down all the way to the bottom of the configuration page. The last 3 sections are named **Point to Point 1, 2 and 3**.

Here's a quick overview of the settings available for a connection:

- **Enabled:** Indicates whether this connection is to be used.
- **Description:** Free-form user description of the connection, not used by the device.
- **Encoder:** Indicates which video feed is to be sent over the point-to-point connection. Possible values include «Primary H.264 » and «Secondary H.264». These values refer to the encoders configured in previous sections of the same web page.
- **Destination IP:** Address where to send the video. This is usually the address of a Decoder. The destination can also be a multicast group address. DNS names are not yet supported, only IP addresses.
- **Destination Port:** Network port where to send the video. This value must match the port value in the Decoder.

Once all the settings have been set, click on **Save** at the bottom of the page to apply them. The Moog EXO Camera then creates or updates the connection as needed.

8.0.0 Troubleshooting Guide

- Device does not seem to boot-up
 - Verify that a power supply is connected to the device.
- Cannot discover the device or communicate via the network
 - Dynamic discovery of the Moog Camera requires multicast networking to be supported by your network and switch equipment. (Bonjour protocol)
 - Make sure you have connected the device to your network.